

3A Single Cell Li-Ion Battery Slave Switching Charger

Purpose

The RT9465 is a switch-mode single cell li-lon/Li-Polymer battery charger for portable applications. It intergrates a synchronous PWM controller, and high accuracy voltage regulation. Besides, the charging current is regulated through the integrated sensing resistors. This document explains the function and use of the RT9465 evaluation board (EVB), and provides information to enable operation, modification of the evaluation board and circuit to suit individual requirements.

Table of Contents

| Purpose | 1 |
|---|---|
| Introduction | 2 |
| Key Performance Summary Table | 2 |
| Panah Taat Satun Conditiona | |
| | 3 |
| Schematic, Bill of Materials & Board Layout | 5 |
| More Information | 8 |
| Important Notice for Richtek Evaluation Board | 8 |



Introduction

General Product Information

The RT9465 is a switch-mode single cell li-Ion/Li-Polymer battery charger for portable applications. It integrates a synchronous PWM controller, and high accuracy voltage regulation. Besides, the charging current is regulated through the integrated sensing resistors.

Product Feature

- Input Voltage Range : 3.9V to 14V
- Synchronous 1.5MHz/0.75MHz Switching Frequency 95% Max. Duty
- Up to 92%/94% Peak Efficiency at VIN = 9V/5V
- VIN Over-Voltage Protection : 14.5V
- VIN Under-Voltage Protection : 3.8V
- VIN Under-Voltage-Lock-Out : 3.3V
- Fault Detection (VIN and VBAT Monitoring)
- INT Output for Communication with I²C
- Programmable Minimum Input Voltage Range : 3.9V to 13.4V (0.1V/Step)
- Programmable Battery Voltage Regulation Range : 3.8V to 5.06V (0.02V/Step)
- Programmable End of Charge Range : 0.6A to 1.6A (0.1A/Step)
- Programmable Average Output Current Regulation Range : 0.6A to 3A (0.1A/Step)
- Junction Temperature Monitor : 60°C to 116°C (4°C/Step)
- VIN Minimum Input Voltage Regulation (MIVR) : ±3%
- Battery CV (Constant Voltage) Regulation : ±1%
- Output CC (Constant Current) Regulation, Output Current < 1A : ±100mA (VBUS = 9V/12V)
- Output CC (Constant Current) Regulation, Output Current > 1A : ±10% (VBUS = 9V/12V)
- Junction Temperature Monitor : ±3°C
- Thermal Shutdown : 160°C

Key Performance Summary Table

| Key Features | Evaluation Board Number : PCB096_V1 |
|--------------------|-------------------------------------|
| Input Voltage | 3.9V to 14V |
| Output Voltage | 3.8V to 5.06V |
| Max Output Current | 3A |
| Package Type | RT9465GQW, WQFN-16L 3x3 (W-Type) |



Bench Test Setup Conditions

Headers Description and Placement



Carefully inspect all the components used in the EVB according to the following Bill of Materials table, and then make sure all the components are undamaged and correctly installed. If there is any missing or damaged component, which may occur during transportation, please contact our distributors or e-mail us at <u>evb_service@richtek.com</u>.

Test Points

The EVB is provided with the test points and pin names listed in the table below.

| Test point/ Pin name | Signal | Comment (expected waveforms or voltage levels on test points) | | | |
|-------------------------|-----------------------------------|---|--|--|--|
| VIN | Input Voltage | DC input power supply | | | |
| VOUT | Output Voltage | Battery connection point to positive terminal of the battery pack. | | | |
| GND | Ground | Ground. | | | |
| BAT+ | Positive Battery Voltage Sense | Positive battery voltage sense. Conect to battery connector. | | | |
| BAT- | Negative Battery Voltage Sense | Negative battery voltage sense. Conect to battery connector. | | | |
| EN | Enable Pin | Device enable control pin. Pull low to disable device. I^2C not available when disabled. | | | |
| INT | Intterrupt | Open drain interrupt output. connect to pull-up voltage via $10k\Omega$ pull-up resistor. Normally high, the INT pin sends an active low. | | | |



| Test point/ Pin name | Signal | Comment (expected waveforms or voltage levels on test points) | | | | |
|-------------------------|--------------------------|--|--|--|--|--|
| SDA | SDA | I^2C interface data. Connect to pull-up voltage via $10k\Omega$ pull-up resistor. | | | | |
| SCL | SCL | I^2C interface clock. Connect to pull-up voltage via $10k\Omega$ pull-up resistor. | | | | |
| LX | Switch node | Switch node. Connect to an external inductor | | | | |
| EXTRNAL | External Pull Up Voltage | External pull up voltage. Connect to power supply | | | | |
| REG | REG | PWM low-side driver and bootstrap power supply. | | | | |
| воот | воот | Bootstrap supply for high-side MOSFET. Connect a capacitor between BOOT and LX. | | | | |

Power-up & Measurement Procedure

- 1. Connect input power (5V < V_{BUS} < 14V) and input ground to VIN and GND test pins respectively.
- 2. Connect positive end and negative terminals of VBAT to VOUT and GND test pins respectively.
- 3. There is a 3-pin header (JP3) for pull-up control. To use a jumper at "EXTRNAL" option to tie pull up pin to external pull up voltage. Use a jumper at "BAT+" option to tie pull-up test pin to battery.
- 4. Connect EN pin to 3.3V to enable device and use I^2C to enable charger.



Schematic, Bill of Materials & Board Layout

EVB Schematic Diagram





Bill of Materials

| Reference | Qty | Part Number | Description | Package | Manufacturer |
|------------|-----|-------------------|-------------------|---------------|--------------|
| U1 | 1 | RT9465GQW | Switching Charger | WQFN-16L 3x3 | RICHTEK |
| C1 | 1 | GRM155R61E225KE11 | 2.2µF/25V/X5R | C-0402 | muRata |
| C2 | 1 | GRM155R60J475ME47 | 4.7µF/6.3V/X5R | C-0402 | muRata |
| C4 | 1 | GRM188R61A106KE69 | 10µF/10V/X5R | C-0603 | muRata |
| C5 | 1 | GRM033R61C473KE84 | 47nF/16V/X5R | C-0201 | muRata |
| L1 | 1 | DFE252012F-1R0M | 1µH | 2.5x2.0x1.2mm | muRata |
| R1, R2, R3 | 3 | NCP15XH103F03RC | 10k | R-0402 | muRata |



PCB Layout



Top View (1st layer)



PCB Layout—Inner Side (2nd Layer)





PCB Layout—Inner Side (3rd Layer)



Bottom View (4th Layer)



More Information

For more information, please find the related datasheet or application notes from Richtek website <u>http://www.richtek.com</u>.

Important Notice for Richtek Evaluation Board

THIS DOCUMENT IS FOR REFERENCE ONLY, NOTHING CONTAINED IN THIS DOCUMENT SHALL BE CONSTRUED AS RICHTEK'S WARRANTY, EXPRESS OR IMPLIED, UNDER CONTRACT, TORT OR STATUTORY, WITH RESPECT TO THE PRESENTATION HEREIN. IN NO EVENT SHALL RICHTEK BE LIABLE TO BUYER OR USER FOR ANY AND ALL DAMAGES INCLUDING WITHOUT LIMITATION TO DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES.