

# **Dual-Output PWM Controller with 3 Integrated Drivers for AMD SVI2 Mobile CPU Power Supply**

### **General Description**

The RT8880B is a 3 + 2 phases PWM controller, and is compliant with AMD SVI2 Voltage Regulator Specification to support both CPU core (VDD) and Northbridge portion of the CPU (VDDNB). The RT8880B features CCRCOT (Constant Current Ripple Constant On-Time) with G-NAVP (Green-Native AVP), which is Richtek's proprietary topology. The G-NAVP makes it an easy setting controller to meet all AMD AVP (Adaptive Voltage Positioning) VDD/ VDDNB requirements. The droop is easily programmed by setting the DC gain of the error amplifier. With proper compensation, the load transient response can achieve optimized AVP performance. The controller also uses the interface to issue VOTF Complete and to send digitally encoded voltage and current values for the VDD and VDDNB domains. It can operate in single phase and diode emulation mode and reach up to 90% efficiency in different modes according to different loading conditions. The RT8880B provides special purpose offset capabilities by pin setting. The RT8880B also provides power good indication, over-current indication (OCP\_L) and dual OCP mechanism for AMD SVI2 CPU core and NB. It also features complete fault protection functions including overvoltage, under-voltage and negative-voltage protections.


#### **Features**

- 3/2/1-Phase (VDD) + 2/1-Phase (VDDNB) PWM Controller
- 3 Embedded MOSFET Drivers
- G-NAVP<sup>TM</sup> Topology
- Support Dynamic Load-Line and Zero Load-Line
- Diode Emulation Mode at Light Load Condition
- SVI2 Interface to Comply with AMD Power Management Protocol
- Build-in ADC for V<sub>OUT</sub> and I<sub>OUT</sub> Reporting
- Immediate OV, UV and NV Protections and UVLO
- Programmable Dual OCP Mechanism
- 0.5% DAC Accuracy
- Fast Transient Response
- Power Good Indicator
- Over-Current Indicator
- 52-Lead WQFN Package
- RoHS Compliant and Halogen Free

# **Applications**

- AMD SVI2 Mobile CPU
- Laptop Computer

# **Simplified Application Circuit**

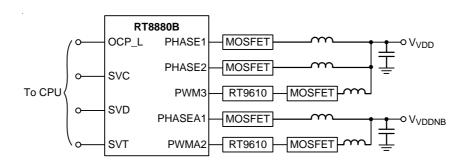

Copyright © 2022 Richtek Technology Corporation. All rights reserved. RICHTEK is a registered trademark of Richtek Technology Corporation.



# **Ordering Information**

RT8880B 🗆 🗆 Package Type

QW: WQFN-52L 6x6 (W-Type)

Lead Plating System

G: Green (Halogen Free and Pb Free)

#### Note:

Richtek products are:

- ▶ RoHS compliant and compatible with the current requirements of IPC/JEDEC J-STD-020.
- ▶ Suitable for use in SnPb or Pb-free soldering processes.


# **Marking Information**

RT8880B **GQW YMDNN** 

RT8880BGQW: Product Number

YMDNN: Date Code

# **Pin Configuration**

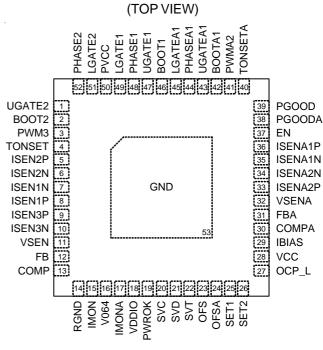

WQFN-52L 6x6

#### **Part Status**

Part No	Status	Package Type	Lead plating System
RT8880BGQW	Obsolete	WQFN-52L 6x6	Green (Halogen Free and Pb Free)

The part status values are defined as follows:

Active: Device is in production and is recommended for new designs.

Lifebuy: The device will be discontinued, and a lifetime-buy period is in effect.

NRND: Not recommended for new designs.

Preview: Device has been announced but is not in production.

Obsolete: Richtek has discontinued the production of the device.



# **Functional Pin Description**

Pin No.	Pin Name	Pin Function
3	PWM3	PWM outputs for Channel 3 VDD controller.
4	TONSET	VDD controller on-time setting. Connect this pin to the converter input voltage, VIN, through a resistor, RTON, to set the on-time of UGATE and also the output voltage ripple of VDD controller.
5, 8, 9	ISEN1P to ISEN3P	Positive current sense input of Channel 1, 2 and 3 for VDD controller.
6, 7, 10	ISEN1N to ISEN3N	Negative current sense input of Channel 1, 2 and 3 for VDD controller.
11	VSEN	VDD controller voltage sense input. This pin is connected to the terminal of VDD controller output voltage.
12	FB	Output voltage feedback input of VDD controller. This pin is the negative input of the error amplifier for the VDD controller.
13	COMP	Compensation node of the VDD controller.
14	RGND	Return ground of VDD and VDDNB controller. This pin is the common negative input of output voltage differential remote sense for VDD and VDDNB controllers.
15	IMON	Current monitor output for the VDD controller. This pin outputs a voltage proportional to the output current.
16	V064	Fixed 0.64V output reference voltage output. This voltage is only used to offset the output voltage of IMON pin and IMONA pin. Connect a 0.47 $\mu\text{F}$ capacitor from this pin to GND.
17	IMONA	Current monitor output for the VDDNB controller. This pin outputs a voltage proportional to the output current.
18	VDDIO	Processor memory interface power rail and serves as the reference for PWROK, SVD, SVC and SVT. This pin is used by the VR to reference the SVI pins.
19	PWROK	System power good input. If PWROK is low, the SVI interface is disabled and VR returns to BOOT-VID state with initial load line slope and initial offset. If PWROK is high, the SVI interface is running and the DAC decodes the received serial VID codes to determine the output voltage.
20	SVC	Serial VID clock input from processor.
21	SVD	Serial VID data input from processor. This pin is a serial data line.
22	SVT	Serial VID telemetry input from VR. This pin is a push-pull output.
23	OFS	Over clocking offset setting for the VDD controller.
24	OFSA	Over clocking offset setting for the VDDNB controller.
25	SET1	1st platform setting. Platform can use this pin to set OCP_TDC threshold, DVID compensation bit1 and internal ramp slew rate.
26	SET2	2st platform setting. Platform can use this pin to set quick response threshold, OCP_TDC trigger delay time, DVID compensation bit0, VDDNB rail zero load-line enable setting and over clocking offset enable setting.
27	OCP_L	Over-current indicator for dual OCP mechanism. This pin is an open-drain output.
28	VCC	Controller power supply Input. Connect this pin to 5V with a $1\mu F$ or greater ceramic capacitor for decoupling.


Copyright ©2022 Richtek Technology Corporation. All rights reserved. **RICHTEK** is a registered trademark of Richtek Technology Corporation.



Pin No.	Pin Name	Pin Function	
29	IBIAS	Internal bias current setting. Connect only a $100k\Omega$ resistor from this pin to GND to generate bias current for internal circuit. Place this resistor as close to the IBIAS pin as possible.	
30	COMPA	Compensation node of the VDDNB controller.	
31	FBA	Output voltage feedback input of VDDNB controller. This pin is the negative input of the error amplifier for the VDDNB controller.	
32	VSENA	VDDNB controller voltage sense input. This pin is connected to the terminal of VDDNB controller output voltage.	
33, 36	ISENA2P, ISENA1P	Positive current sense input of Channel 1 and 2 for VDDNB controller.	
34, 35	ISENA2N, ISENA1N Negative current sense input of Channel 1 and 2 for VDDNB controlled		
37	EN	Controller enable control input. A logic high signal enables the controller.	
38	PGOODA	Power good indicator for the VDDNB controller. This pin is an open-drain output.	
39	PGOOD	Power good indicator for the VDD controller. This pin is an open-drain output.	
40	TONSETA	VDDNB controller on-time setting. Connect this pin to the converter input voltage, VIN, through a resistor, RTONNB, to set the on-time of UGATE_VDDNB and also the output voltage ripple of VDDNB controller.	
41	PWMA2	PWM output for Channel 2 of VDDNB controller.	
46, 2, 42	BOOT1, BOOT2, BOOTA1	Bootstrap supply for high-side MOSFET. This pin powers high-side MOSFET driver.	
47, 1, 43	UGATE1, UGATE2, UGATEA1	High-side gate driver outputs. Connect this pin to gate of high-side MOSFET.	
48, 52, 44	PHASE1, PHASE2, PHASEA1	Switch nodes of high-side driver. Connect this pin to high-side MOSFET source together with the low-side MOSFET drain and the inductor.	
49, 51, 45	LGATE1, LGATE2, LGATEA1	Low-side gate driver outputs. This pin drives the gate of low-side MOSFET.	
50	PVCC	Driver power. Connect this pin to GND by ceramic capacitor larger than 1µF.	
53 (Exposed Pad)	GND	Ground. The exposed pad must be soldered to a large PCB and connected to GND for maximum power dissipation.	



# **Functional Block Diagram**

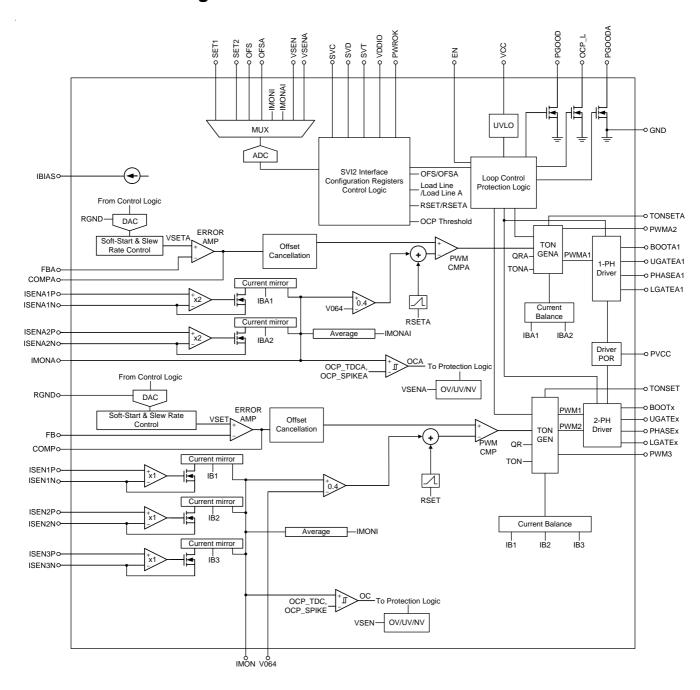



### **Operation**

#### **MUX and ADC**

The MUX supports the inputs from SET1, SET2, OFS, OFSA, IMON, IMONA, VSEN, or VSENA. The ADC converts these analog signals to digital codes for reporting or performance adjustment.

#### **SVI2 Interface**

The SVI2 interface uses the SVC, SVD, and SVT pins to communicate with CPU. The RT8880B's performance and behavior can be adjusted by commands sent by CPU or platform.

#### **UVLO**

The UVLO detects the VCC pin voltages for under voltage lockout protection and power on reset operation.

#### **Loop Control Protection Logic**

Loop control protection logic detects EN and UVLO signals to initiate soft-start function and control PGOOD, PGOODA and OCP\_L signals after soft-start is finished. When dual OCP event occurs, the OCP\_L pin voltage will be pulled low.

#### DAC

The DAC receives VID codes from the SVI2 control logic to generate an internal reference voltage (VSET/VSETA) for controller.

#### **Soft-Start and Slew-Rate Control**

This block controls the slew rate of the internal reference voltage when output voltage changes.

#### **Error Amplifier**

The Error amplifier generates COMP/COMPA signal by the difference between VSET/VSETA and FB/FBA.

#### Offset Cancellation

This block cancels the output offset voltage from voltage ripple and current ripple to achieve accurate output voltage.

#### **PWM CMPx**

The PWM comparator compares COMP signal and current feedback signal to generate a signal for TONGENx.

#### TONGEN/TONGENA

This block generates an on-time pulse which high interval is based on the on-time setting and current balance.

#### **Current Balance**

Per-phase current is sensed and adjusted by adjusting on-time of each phase to achieve current balance for each phase.

#### OC/OV/UV/NV

VSEN/VSENA and output current are sensed for overcurrent, over-voltage, under-voltage, and negative-voltage protections.

#### RSET/RSETA

The Ramp generator is designed to improve noise immunity and reduce jitter.



Table 1. Serial VID Codes

SVID [7:0]	Voltage (V)						
0000_0000	1.55000	0010_0111	1.30625	0100_1110	1.06250	0111_0101	0.81875
0000_0001	1.54375	0010_0111	1.30000	0100_1111	1.05625	0111_0110	0.81250
0000_0010	1.53750	0010_1001	1.29375	0101_0000	1.05000	0111_0111	0.80625
0000_0011	1.53125	0010_1010	1.28750	0101_0001	1.04375	0111_1000	0.80000
0000_0100	1.52500	0010_1011	1.28125	0101_0010	1.03750	0111_1001	0.79375
0000_0101	1.51875	0010 1100	1.27500	0101_0011	1.03125	0111_1010	0.78750
0000_0110	1.51250	0010_1101	1.26875	0101_0100	1.02500	0111_1011	0.78125
0000_0111	1.50625	0010_1110	1.26250	0101_0101	1.01875	0111_1100	0.77500
0000_1000	1.50000	0010_1111	1.25625	0101_0110	1.01250	0111_1101	0.76875
0000_1001	1.49375	0011_0000	1.25000	0101_0111	1.00625	0111_1110	0.76250
0000_1010	1.48750	0011_0001	1.24375	0101_1000	1.00000	0111_1111	0.75625
0000_1011	1.48125	0011_0010	1.23750	0101_1001	0.99375	1000_0000	0.75000
0000_1100	1.47500	0011_0011	1.23125	0101_1010	0.98750	1000_0001	0.74375
0000_1101	1.46875	0011_0100	1.22500	0101_1011	0.98125	1000_0010	0.73750
0000_1110	1.46250	0011_0101	1.21875	0101_1100	0.97500	1000_0011	0.73125
0000_1111	1.45625	0011_0110	1.21250	0101_1101	0.96875	1000_0100	0.72500
0001_0000	1.45000	0011_0111	1.20625	0101_1110	0.96250	1000_0101	0.71875
0001_0001	1.44375	0011_1000	1.20000	0101_1111	0.95625	1000_0110	0.71250
0001_0010	1.43750	0011_1001	1.19375	0110_0000	0.95000	1000_0111	0.70625
0001_0011	1.43125	0011_1010	1.18750	0110_0001	0.94375	1000_1000	0.70000
0001_0100	1.42500	0011_1011	1.18125	0110_0010	0.93750	1000_1001	0.69375
0001_0101	1.41875	0011_1100	1.17500	0110_0011	0.93125	1000_1010	0.68750
0001_0110	1.41250	0011_1101	1.16875	0110_0100	0.92500	1000_1011	0.68125
0001_0111	1.40625	0011_1110	1.16250	0110_0101	0.91875	1000_1100	0.67500
0001_1000	1.40000	0011_1111	1.15625	0110_0110	0.91250	1000_1101	0.66875
0001_1001	1.39375	0100_0000	1.15000	0110_0111	0.90625	1000_1110	0.66250
0001_1010	1.38750	0100_0001	1.14375	0110_1000	0.90000	1000_1111	0.65625
0001_1011	1.38125	0100_0010	1.13750	0110_1001	0.89375	1001_0000	0.65000
0001_1100	1.37500	0100_0011	1.13125	0110_1010	0.88750	1001_0001	0.64375
0001_1101	1.36875	0100_0100	1.12500	0110_1011	0.88125	1001_0010	0.63750
0001_1110	1.36250	0100_0101	1.11875	0110_1100	0.87500	1001_0011	0.63125
0001_1111	1.35625	0010_0110	1.11250	0110_1101	0.86875	1001_0100	0.62500
0010_0000	1.35000	0100_0111	1.10625	0110_1110	0.86250	1001_0101	0.61875
0010_0001	1.34375	0100_1000	1.10000	0110_1111	0.85625	1001_0110	0.61250
0010_0010	1.33750	0100_1001	1.09375	0111_0000	0.85000	1001_0111	0.60625
0010_0011	1.33125	0100_1010	1.08750	0111_0001	0.84375	1001_1000	0.60000
0010_0100	1.32500	0100_1011	1.08125	0111_0010	0.83750	1001_1001	0.59375
0010_0101	1.31875	0100_1100	1.07500	0111_0011	0.83125	1001_1010	0.58750
0010_0110	1.31250	0100_1101	1.06875	0111_0100	0.82500	1001_1011	0.58125



SVID [7:0]	Voltage (V)	SVID [7:0]	Voltage (V)	SVID [7:0]	Voltage (V)	SVID [7:0]	Voltage (V)
1001_1100	0.57500	1011_0101 *	0.41875	1100_1110 *	0.26250	1110_0111*	0.10625
1001_1101	0.56875	1011_0110 *	0.41250	1100_1111 *	0.25625	1110_1000*	0.10000
1001_1110	0.56250	1011_0111 *	0.40625	1101_0000 *	0.25000	1110_1001*	0.09375
1001_1111	0.55625	1011_1000 *	0.40000	1101_0001 *	0.24375	1110_1010*	0.08750
1010_0000	0.55000	1011_1001 *	0.39375	1101_0010 *	0.23750	1110_1011*	0.08125
1010_0001	0.54375	1011_1010 *	0.38750	1101_0011 *	0.23125	1110_1100*	0.07500
1010_0010	0.53750	1011_1011 *	0.38125	1101_0100 *	0.22500	1110_1101*	0.06875
1010_0011	0.53125	1011_1100 *	0.37500	1101_0101 *	0.21875	1110_1110*	0.06250
1010_0100	0.52500	1011_1101 *	0.36875	1101_0110 *	0.21250	1110_1111*	0.05625
1010_0101	0.51875	1011_1110 *	0.36250	1101_0111 *	0.20625	1111_0000*	0.05000
1010_0110	0.51250	1011_1111 *	0.35625	1101_1000 *	0.20000	1111_0001*	0.04375
1010_0111	0.50625	1100_0000 *	0.35000	1101_1001 *	0.19375	1111_0010*	0.03750
1010_1000 *	0.50000	1100_0001 *	0.34375	1101_1010 *	0.18750	1111_0011*	0.03125
1010_1001 *	0.49375	1100_0010 *	0.33750	1101_1011 *	0.18125	1111_0100*	0.02500
1010_1010 *	0.48750	1100_0011 *	0.33125	1101_1100 *	0.17500	1111_0101*	0.01875
1010_1011 *	0.48125	1100_0100 *	0.32500	1101_1101 *	0.16875	1111_0110*	0.01250
1010_1100 *	0.47500	1100_0101 *	0.31875	1101_1110 *	0.16250	1111_0111*	0.00625
1010_1101 *	0.46875	1100_0110 *	0.31250	1101_1111 *	0.15625	1111_1000*	0.00000
1010_1110 *	0.46250	1100_0111 *	0.30625	1110_0000*	0.15000	1111_1001*	OFF
1010_1111 *	0.45625	1100_1000 *	0.30000	1110_0001*	0.14375	1111_1010*	OFF
1011_0000 *	0.45000	1100_1001 *	0.29375	1110_0010*	0.13750	1111_1011*	OFF
1011_0001 *	0.44375	1100_1010 *	0.28750	1110_0011*	0.13125	1111_1100*	OFF
1011_0010 *	0.43750	1100_1011 *	0.28125	1110_0100*	0.12500	1111_1101*	OFF
1011_0011 *	0.43125	1100_1100 *	0.27500	1110_0101*	0.11875	1111_1110*	OFF
1011_0100 *	0.42500	1100_1101 *	0.26875	1110_0110*	0.11250	1111_1111*	OFF

<sup>\*</sup> Indicates TOB is 80mV for this VID code; unconditional VR controller stability required at all VID codes



Table 2. SET1 Pin Setting for VDD Controller

SET1 Pin Voltage Before Current Injection V <sub>SET1</sub> (mV)	OCP_TDC (Respect to OCP_ SPIKE)	DVID Compensation [1]	RSET	SET1 Pin Voltage Before Current Injection V <sub>SET1</sub> (mV)	OCP_TDC (Respect to OCP_ SPIKE)	DVID Compensation [1]	RSET					
34			145%	836			145%					
59			130%	861			130%					
85	60%	0	115%	886	60%	4	115%					
110		U	100%	911	60%	1	100%					
135			85%	936			85%					
160			70%	961			70%					
235	700/		145%	1036			145%					
260					130%	1061			130%			
285		0	115%	1086	70%	1	115%					
310	70%	U	100%	1112	70%		100%					
335			85%	1137			85%					
360			70%	1162			70%					
435								145%	1237			145%
460											130% 1262	
485	75%	0	115%	1287	75%	4	115%					
510	75%	0	100%	1312	75%	1	100%					
535			85%	1337			85%					
560			70%	1362			70%					
636			145%	1437			145%					
661			130%	1462			130%					
686	Diochla	0	115%	1487	Diochla	4	115%					
711	Disable	0	100%	1512	Disable	1	100%					
736			85%	1537			85%					
761			70%	1562			70%					



Table 3. SET1 Pin Setting for VDDNB Controller

SET1 Pin Voltage Difference  ΔV <sub>SET1</sub> (Before and After Current Injection) (mV)	OCP_TDCA (Respect to OCP_ SPIKEA)	DVIDA Compensation [1]	RSETA	SET1 Pin Voltage Difference ΔV <sub>SET1</sub> (Before and After Current Injection) (mV)	OCP_TDCA (Respect to OCP_ SPIKEA)	DVIDA Compensation [1]	RSETA											
34			145%	836			145%											
59			130%	861			130%											
85	000/		115%	886	600/	_	115%											
110	60%	0	100%	911	60%	1	100%											
135			85%	936			85%											
160			70%	961			70%											
235	70%		145%	1036			145%											
260		70%			130%	1061			130%									
285			0	115%	1086	70%	1	115%										
310		0	100%	1112	70%	'	100%											
335			85%	1137			85%											
360			70%	1162			70%											
435														145%	1237			145%
460			130%	1262			130%											
485	75%	0	115%	1287	75%	1	115%											
510	75%	0	100%	1312	75%	'	100%											
535			85%	1337			85%											
560			70%	1362			70%											
636			145%	1437			145%											
661			130%	1462			130%											
686	Disable	0	115%	1487	Disable	1	115%											
711	Disable		100%	1512	DISADIE	'	100%											
736			85%	1537			85%											
761			70%	1562			70%											



Table 4. SET2 Pin Setting

SET2 Pin Voltage Before Current Injection V <sub>SET2</sub> (mV)	QRTH (for VDD)	DVID Compensation [0]	NB OLL Setting	OCPTRGDELAY (for VDD/VDDNB)	
19			0	10ms	
72	Disable  39mV  47mV  55mV  Disable	0	0	40ms	
122	Disable		1	10ms	
172			1	40ms	
222			0	10ms	
272	39mV	0	0	40ms	
323	391117	0	1	10ms	
373			1	40ms	
423			0	10ms	
473	47.00\/	0	0	40ms	
523	471110	4/IIIV	0	1	10ms
573			1	40ms	
623	- 55mV		0	10ms	
673			0	40ms	
723		0	1	10ms	
773			1	40ms	
823			0	10ms	
874	Disable	Disable	4	0	40ms
924			1	1	10ms
974			1	40ms	
1024			0	10ms	
1074	201/		0	40ms	
1124	39mV	1	1	10ms	
1174			1	40ms	
1224			0	10ms	
1274	47	_	0	40ms	
1324	47mV	1	1	10ms	
1375			1	40ms	
1425			0	10ms	
1475	FF\/		0	40ms	
1525	55mV	1	1	10ms	
1575		<u>                                      </u>	1	40ms	



Table 5. Quick Response Threshold for VDDNB Controller

SET2 Pin Voltage Difference $\Delta V_{SET2}$ (Before and After Current Injection) (mV)	OFSENABLE	OFSAENABLE	DVIDA Compensation [0]	QRTHA (for VDDNB)
19				Disable
72			0	39mV
122		47mV		
172			55mV	
222		0		Disable
272			4	39mV
323			l	47mV
373	0			55mV
423				Disable
473				39mV
523			0	47mV
573	1	4		55mV
623		l l		Disable
673			4	39mV
723			l	47mV
773				55mV
823				Disable
874			0	39mV
924			U	47mV
974		0	0	55mV
1024		0		Disable
1074			4	39mV
1124			1	47mV
1174	4			55mV
1224	l			Disable
1274			0	39mV
1324			0	47mV
1375		4		55mV
1425		'		Disable
1475			4	39mV
1525			1	47mV
1575			55mV	



# **Table 6. DVID Boost Compensation Setting**

DVID Compensation [1]	DVID Compensation [0]	DVID Boost Compensation
0	0	22.5mV
0	1	18mV
1	0	13.5mV
1	1	9mV



# Absolute Maximum Ratings (Note 1)

_	
• VCC to GND	0.3V to 6V
• PVCC to GND	0.3V to 6V
• RGND to GND	0.3V to 0.3V
• TONSET, TONSETA to GND	0.3V to 28V
• BOOTx to PHASEx	0.3V to 6V
PHASEx to GND	
DC	0.3V to 32V
< 20ns	8V to 38V
LGATEx to GND	
DC	0.3V to 6V
< 20ns	–2.5V to 7.5V
UGATEx to PHASEx	
DC	0.3V to 6V
< 20ns	–2.5V to 7.5V
• Other Pins	$-0.3V$ to $(V_{CC} + 0.3V)$
• Power Dissipation, P <sub>D</sub> @ T <sub>A</sub> = 25°C	
WQFN-52L 6x6	3.77W
Package Thermal Resistance (Note 2)	
WQFN-52L 6x6, $\theta_{JA}$	26.5°C/W
WQFN-52L 6x6, $\theta_{JC}$	6.5°C/W
• Junction Temperature	150°C
• Lead Temperature (Soldering, 10 sec.)	260°C
Storage Temperature Range	–65°C to 150°C
ESD Susceptibility (Note 3)	
HBM (Human Body Model)	2kV
Recommended Operating Conditions (Note 4)	
• Supply Voltage, VCC	4.5V to 5.5V
• Input Voltage, VIN	4.5V to 26V
Junction Temperature Range	40°C to 125°C

### **Electrical Characteristics**

( $V_{CC}$  = 5V,  $T_A$  = 25°C, unless otherwise specified)

Parameter	Symbol	Test Conditions		Тур	Max	Unit		
Input Power Supply								
Supply Current	lvcc	EN = 3V, not switching		12		mA		
Shutdown Current	Ishdn	EN = 0V		-	5	μΑ		
PVCC Supply Voltage	VPVCC		4.5		5.5	V		
PVCC Supply Current	I <sub>PVCC</sub>	V <sub>BOOTx</sub> = 5V, not switching		150		μΑ		

• Ambient Temperature Range ----- --- -40°C to 85°C



Parameter	Symbol	Test Conditions	Min	Тур	Max	Unit
Driver Power On Reset (D	river POR)					
Driver DOD Throohold	VPOR_r	PVCC rising		3.85	4.1	V
Driver POR Threshold	VPOR_f	PVCC falling	3.4	3.65		V
Driver POR Hysteresis	VPOR_Hys			200	-	mV
Reference and DAC						
		V <sub>FB</sub> = 1.0000 – 1.5500 (No load, CCM mode)	-0.5	0	0.5	%SVID
DC Accuracy	V <sub>FB</sub>	V <sub>FB</sub> = 0.8000 - 1.0000	-5	0	5	
·		$V_{FB} = 0.3000 - 0.8000$	-8	0	8	mV
		V <sub>FB</sub> = 0.2500 - 0.3000	-80	0	80	
RGND Current						
RGND Current	IRGND	EN = 3V, not switching		200		μА
Slew Rate	•		•	•		•
Dynamic VID Slew Rate	SR	SetVID Fast	7.5	12		mV/μs
Error Amplifier			•	•		•
Input Offset	VEAOFS				2	mV
DC Gain	ADC	$R_L = 47k\Omega$	70	80		dB
Gain-Bandwidth Product	GBW	CLOAD = 5pF		10		MHz
Output Voltage Range	Vсомр		0.3		3.6	V
Maximum Source Current	IEA, SRC		1			mA
Maximum Sink Current	IEA, SNK		1			mA
Current Sense Amplifier	•		•			•
Input Offset Voltage	Voscs		-0.2		0.2	mV
Current Mirror Gain for CORE	Amirror, vdd		97		103	%
Current Mirror Gain for NB	AMIRROR, VDDNB		194		206	%
Internal Sum Current Sense DC Gain for CORE	Ai, VDD	VDD controller		0.4		V/V
Internal Sum Current Sense DC Gain for NB	Ai, VDDNB	VDDNB controller		0.8		V/V
Maximum Source Current	ICS, SRC	0 < V <sub>FB</sub> < 2.35	100			μΑ
Maximum Sink Current	ICS, SNK	0 < V <sub>FB</sub> < 2.35	10			μΑ
Zero Current Detection	•		- 1			
Zero Current Detection Threshold	Vzcd_th	Vzcd_th = GND - Vphasex		1		mV
Ton Setting	•	•				
TONSETx Pin Minimum Voltage	VTON, MIN			0.5		V
TONSETx Ton	ton	IRTON = 80μA, V <sub>FB</sub> = 1.1V	270	305	340	ns
TONSETx Input Current Range	I <sub>RTON</sub>	V <sub>FB</sub> = 1.1V	25		280	μА
Minimum TOFF	toff			250		ns



Parameter		Symbol	Test Conditions	Min	Тур	Max	Unit
IBIAS				•	•		
IBIAS Pin Volta	ige	V <sub>IBIAS</sub>	R <sub>IBIAS</sub> = 100k	1.97	2	2.03	V
V064		•		•	•		
Reference Volt	age Output	V <sub>064</sub>		0.61	0.64	0.67	V
Sink Current C	apability	I <sub>V064</sub> , SNK	V064 = 0.64V	800			μΑ
Source Current	t Capability	I <sub>V064</sub> , SRC				100	μΑ
Board OFSx							
VFB Limit		V <sub>FB</sub> , LIMIT		0		2.35	V
OFS Update R	ate	fors			50		kHz
Board Offset R	esolution	ΔVofs			6.25		mV
Logic Inputs							
EN Input	Logic-High	V <sub>IH</sub> EN		2			V
Voltage	Logic-Low	VIL_EN				0.8	V
Leakage Curre	nt of EN	I <sub>LEK_EN</sub>		-1		1	μΑ
SVC, SVD,	Logic-High	V <sub>IH</sub> _SVI	Respect to VDDIO	70		100	21
SVT, PWROK	Logic-Low	V <sub>IL_SVI</sub>	Respect to VDDIO	0		35	%
Hysteresis of S SVT, PWROK I		VHYS_SVI	Respect to VDDIO	10			%
Protection				ı			
Under-Voltage Threshold	Lockout	Vuvlo	VCC falling edge	4	4.2	4.4	V
Under-Voltage Hysteresis	Lockout	ΔVυνιο			100		mV
Under-Voltage Delay	Lockout	tuvLo	Vcc rising above UVLO threshold		3		μS
Over-Voltage P	rotection	Vovp	VID higher than 0.9V	VID + 275	VID + 325	VID + 375	mV
Tillesiloid			VID lower than 0.9V	1175	1225	1275	
Over-Voltage P Delay	rotection	tovp	V <sub>SEN</sub> rising above threshold		1		μS
Under-Voltage Threshold	Protection	V <sub>UVP</sub>	Respect to VID voltage	-575	-500	-425	mV
Under-Voltage Delay	Protection	tuvp	V <sub>SEN</sub> falling below threshold		3		μS
Negative-Voltage		V <sub>NV</sub>			0		mV
Per Phase OCI	P Threshold	IOCP_PERPHASE	I <sub>ISENxN</sub> per-phase OCP threshold.		10		μΑ
Delay of Per Phase OCP t <sub>P</sub>		t <sub>PHOCP</sub>			1		μS
OCP_SPIKE Threshold		IOCP_SPIKE	DCR = $1.1 \text{m}\Omega$ , Rsense = $1.1 \text{k}\Omega$ , Rimon = $34.3 \text{k}\Omega$	68	75	83	Α
OCP_SPIKE A	ction Delay	tocpspike _action_dly		6		12	μS



Parameter	Symbol	Test Conditions	Min	Тур	Max	Unit	
OCP_TDC Action Delay	tocptdc _action_dly		12		24	μS	
OCP_L, PGOOD and PGOODA							
Output Low Voltage at OCP_L	Vocp_L	I <sub>OCP_L</sub> = 4mA	0		0.2	V	
OCP_L Assertion Time	tocp_L		2			μS	
Output Low Voltage at PGOOD, PGOODA	Vpgood, Vpgooda,	IPGOOD = 4mA, IPGOODA = 4mA	0		0.2	V	
PGOOD and PGOODA Threshold Voltage	VTH_PGOOD VTH_PGOODA	Respect to VBOOT		-300		mV	
PGOOD and PGOODA Delay Time	tpgood tpgooda	V <sub>SEN</sub> = V <sub>BOOT</sub> to PGOOD/PGOODA high	70	100	130	μS	
Current Report			•		•		
Maximum Reported Current (FFh = OCP)				100		%IDD_SP IKE_OCP	
Minimum Reported Current (00h)				0		%IDD_SP IKE_OCP	
IDDSpike Current Accuracy					3	%	
Voltage Report	•			•			
Maximum Reported Voltage (0_00h)				3.15		V	
Minimum Reported Voltage (1_F8h)				0		V	
Voltage Accuracy			-2		2	LSB	
PWM Driving Capability			•	•		•	
PWMx Source Resistance	R <sub>PWM_SRC</sub>			20		Ω	
PWMx Sink Resistance	R <sub>PWM_SNK</sub>			10		Ω	
Switching Time			•				
UGATEx Rise Time	tugater	3nf load		8		ns	
UGATEx Fall Time	tugatef	3nf load		8		ns	
LGATEx Rise Time	tLGATEr	3nf load		8		ns	
LGATEx Fall Time	tLGATEf	3nf load		4		ns	
UGATEx Turn-On Propagation Delay	tpDHU	Outputs unloaded		20		ns	
LGATEx Turn-On Propagation Delay	tpDHL	Outputs unloaded		20		ns	




Parameter	Symbol	Test Conditions	Min	Тур	Max	Unit		
Output	Output							
UGATEx Driver Source Resistance	RUGATEsr	100mA source current		1		Ω		
UGATEx Driver Source Current	lugatesr	Vugate – Vphase = 2.5V		2		Α		
UGATEx Driver Sink Resistance	RUGATEsk	100mA sink current		1		Ω		
UGATEx Driver Sink Current	lugatesk	Vugate – Vphase = 2.5V		2		А		
LGATEx Driver Source Resistance	RLGATEsr	100mA source current		1		Ω		
LGATEx Driver Source Current	ILGATEsr	VLGATE = 2.5V		2		Α		
LGATEx Driver Sink Resistance	RLGATEsk	100mA sink current		0.5		Ω		
LGATEx Driver Sink Current	ILGATEsk	VLGATE = 2.5V		4		А		
SVI2 Bus								
SVC Frequency	fsvc	(Note 5)	0.1		30	MHz		

- **Note 1.** Stresses beyond those listed "Absolute Maximum Ratings" may cause permanent damage to the device. These are stress ratings only, and functional operation of the device at these or any other conditions beyond those indicated in the operational sections of the specifications is not implied. Exposure to absolute maximum rating conditions may affect device reliability.
- **Note 2.**  $\theta_{JA}$  is measured under natural convection (still air) at  $T_A = 25^{\circ}\text{C}$  with the component mounted on a high effective-thermal-conductivity four-layer test board on a JEDEC 51-7 thermal measurement standard.  $\theta_{JC}$  is measured at the exposed pad of the package.
- Note 3. Devices are ESD sensitive. Handling precaution is recommended.
- Note 4. The device is not guaranteed to function outside its operating conditions.
- **Note 5.** Min. SVC frequency defined in electrical spec. is related with different application. As min. SVC < 1MHz, VR can't support telemetry reporting function. As min. SVC < 400kHz, VR can't support telemetry reporting function and VOTF complete function.




# **Typical Application Circuit**

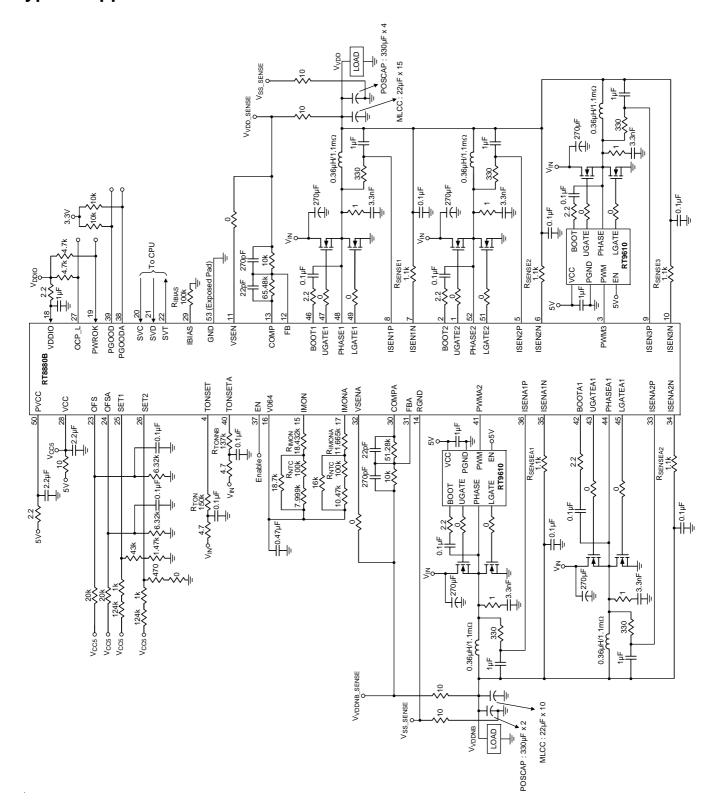



Copyright ©2022 Richtek Technology Corporation. All rights reserved. RICHTEK is a registered trademark of Richtek Technology Corporation.





# **Typical Operating Characteristics**

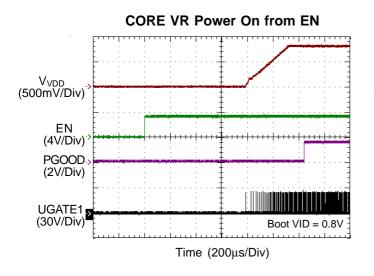


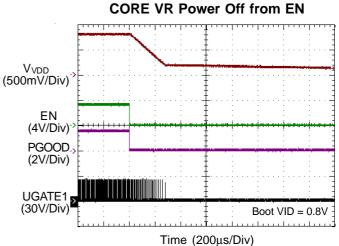

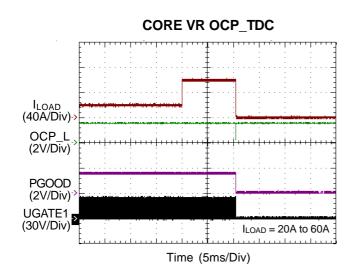


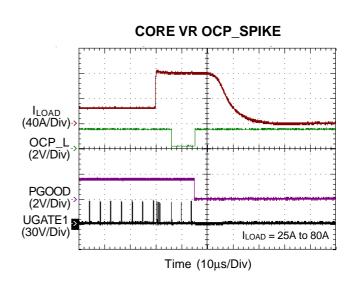


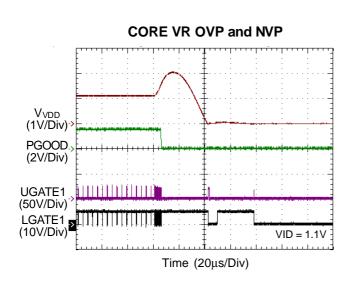


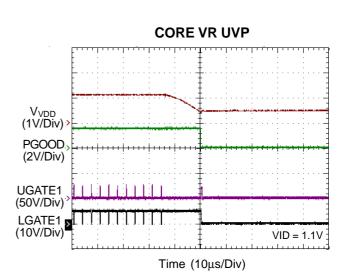





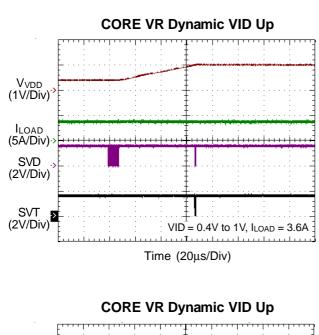


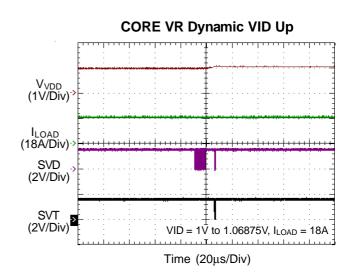

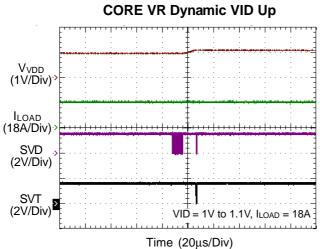


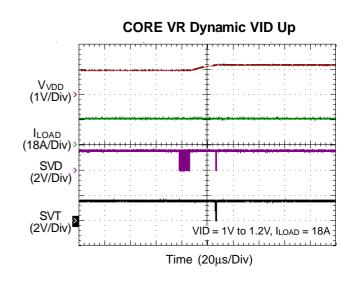

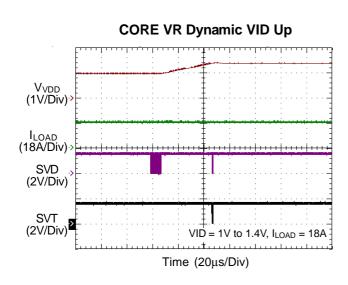


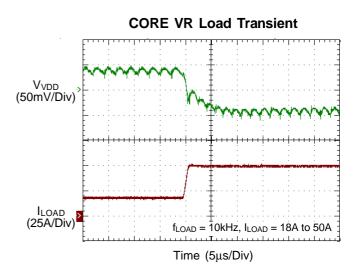





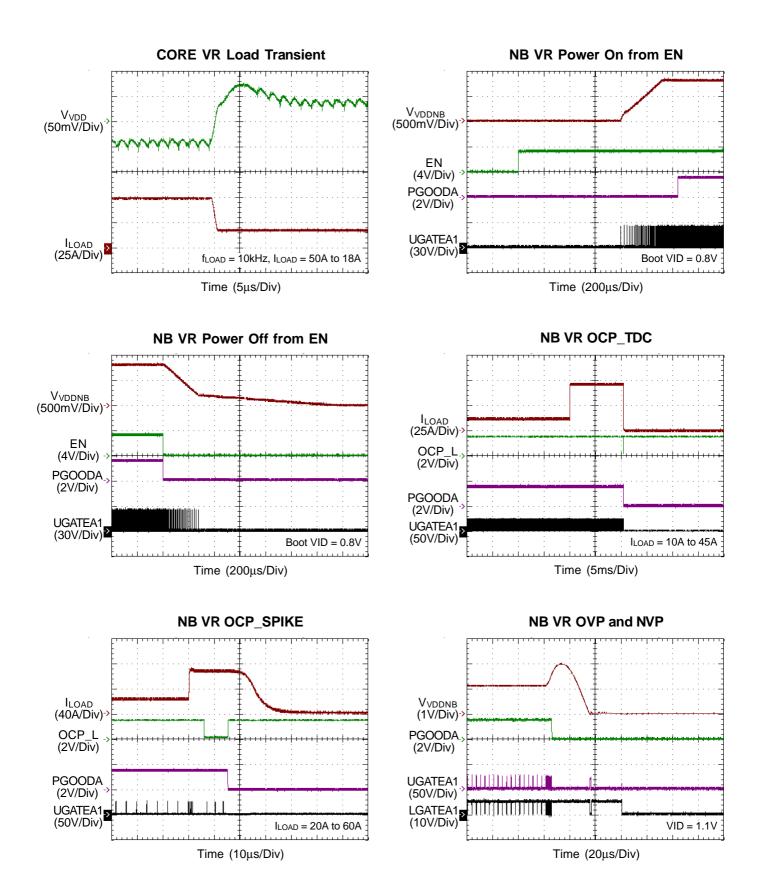





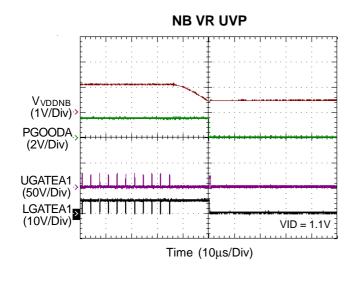


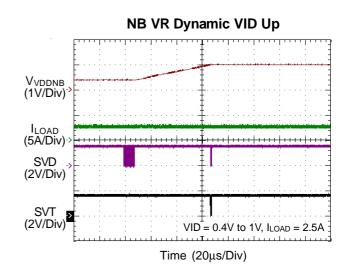

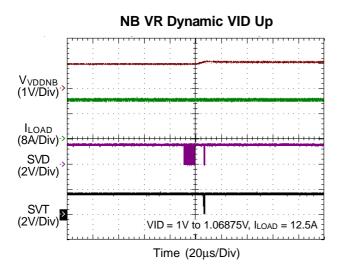


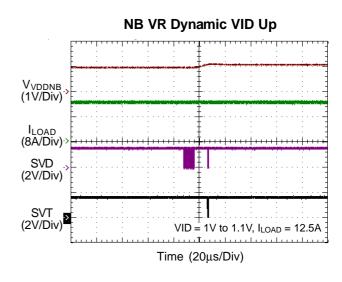


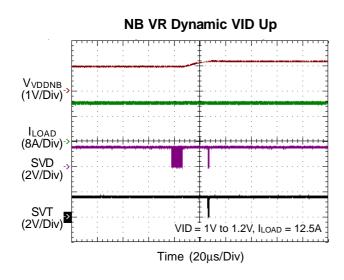

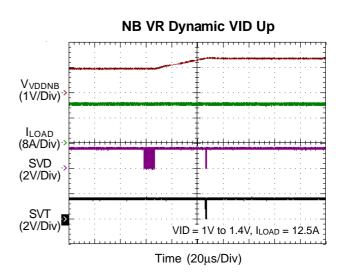



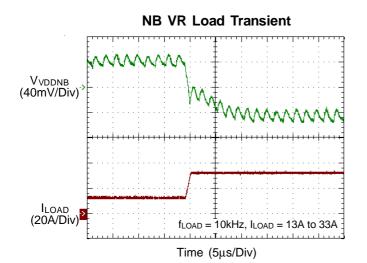

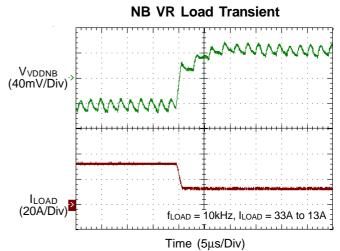



### **Application Information**

#### Power Ready (POR) Detection

During start-up, the RT8880B will detect the voltage at the voltage input pins: VCC, PVCC and EN. When VCC > 4.2V and PVCC > 3.85V, the IC will recognize the power state of system to be ready (POR = high) and wait for enable command at the EN pin. After POR = high and  $V_{EN}$  > 2V, the IC will enter start-up sequence for both VDD rail and VDDNB rail. If the voltage at the pins of VCC and EN drop below low threshold, the IC will enter power down sequence and all the functions will be disabled. Normally, connecting system power to the EN pin is recommended. The SVID will be ready in 2ms (max) after the chip has been enabled. All the protection latches (OVP, OCP, UVP) will be cleared only after POR = low. The condition of  $V_{EN}$  = low will not clear these latches.

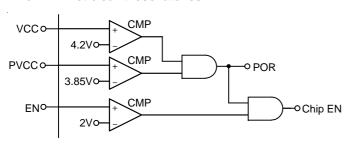


Figure 1. Power Ready (POR) Detection

#### **Precise Reference Current Generation**

The RT8880B includes complicated analog circuits inside the controller. The IC needs very precise reference voltage/current to drive these analog circuits. The IC will auto generate a 2V voltage source at the IBIAS pin, and a  $100k\Omega$  resistor is required to be connected between IBIAS and analog ground, as shown in Figure 2. Through this connection, the IC will generate a  $20\mu\text{A}$  current from the IBIAS pin to analog ground, and this  $20\mu\text{A}$  current will be mirrored for internal use. Note that other type of connection or other values of resistance applied at the IBIAS pin may cause functional failure, such as slew rate control, OFS accuracy, etc. In other words, the IBIAS pin can only be connected with a  $100k\Omega$  resistor to GND. The resistance accuracy of this resistor is recommended to be 1% or higher.

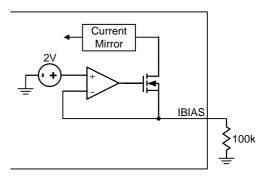


Figure 2. IBIAS Setting

#### **Boot VID**

When EN goes high, both VDD and VDDNB output begin to soft-start to the boot VID in CCM. Table 7 shows the Boot VID setting. The Boot VID is determined by the SVC and SVD input states at EN rising edge and it is stored in the internal register. The digital soft-start circuit ramps up the reference voltage at a controlled slew rate to reduce inrush current during start-up. When all the output voltages are above power good threshold (300mV below Boot VID) at the end of soft-start, the controller asserts power good after a time delay.

Table 7. 2-Bit Boot VID Code

Initial Startup VID (Boot VID)					
SVC SVD VDD/VDDNB Output Voltage (V)					
0	0 0 1.1				
0	) 1 1.0				
1	0 0.9				
1	1	0.8			

#### Start-Up Sequence

After EN goes high, the RT8880B starts up and operates according to the initial settings. Figure 3 shows the simplified sequence timing diagram. The detailed operation is described in the following.

Copyright ©2022 Richtek Technology Corporation. All rights reserved. RICHTEK is a registered trademark of Richtek Technology Corporation.

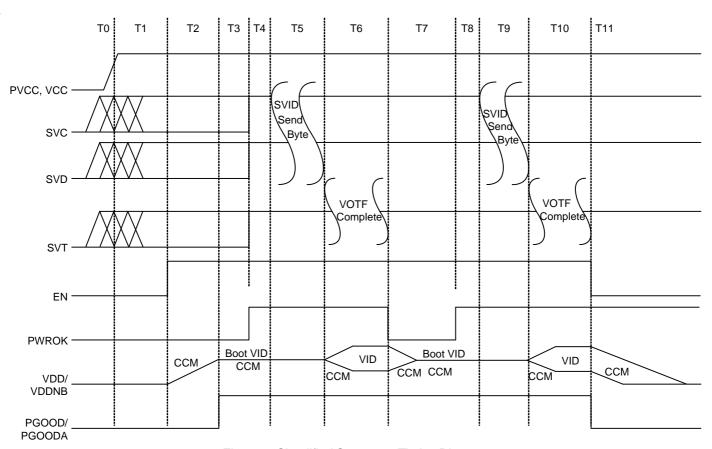


Figure 3. Simplified Sequence Timing Diagram

#### Description of Figure 3:

T0: The RT8880B waits for VCC and PVCC POR.

T1: The SVC pin and SVD pin set the Boot VID. Boot VID is latched at EN rising edge. SVT is driven high by the RT8880B.

T2: The enable signal goes high and all output voltages ramp up to the Boot VID in CCM. The soft-start slew rate is 3mV/μs.

T3: All output voltages are within the regulation limits and the PGOOD and PGOODA signal goes high.

T4: The PWROK pin goes high and the SVI2 interface starts running. The RT8880B waits for SVID command from processor.

T5: A valid SVID command transaction occurs between the processor and the RT8880B.

T6: The RT8880B starts VOTF (VID on-the-Fly) transition according to the received SVID command and send a VOTF Complete if the VID reaches target VID.

T7: The PWROK pin goes low and the SVI2 interface stops running. All output voltages go back to the boot VID in CCM.

T8: The PWROK pin goes high again and the SVI2 interface starts running. The RT8880B waits for SVID command from processor.

T9: A valid SVID command transaction occurs between the processor and the RT8880B.

T10: The RT8880B starts VID on-the-Fly transition according to the received SVID command and send a VOTF Complete if the VID reaches target VID.

T11: The enable signal goes low and all output voltages enter soft-shutdown mode.



#### **Power-Down Sequence**

If the voltage at the EN pin falls below the enable falling threshold, the controller is disabled. The voltage at the PGOOD and PGOODA pins will immediately go low at the loss of enable signal at the EN pin and the controller executes soft-shutdown operation. The internal digital circuit ramps down the reference voltage at the same slew rate as that of in soft-start, making VDD and VDDNB output voltages gradually decrease in CCM. Each of the controller channels stops switching when the voltage at the voltage sense pin V<sub>SEN</sub>/V<sub>SENA</sub>, cross about 0.2V. The Boot VID information stored in the internal register is cleared at IC POR. This event forces the RT8880B to check the SVC and SVD inputs for a new boot VID when the EN voltage goes high again.

#### **PGOOD and PGOODA**

The PGOOD and PGOODA are open-drain logic outputs. The two pins provide the power good signal when VDD and VDDNB output voltage are within the regulation limits and no protection is triggered. These pins are typically tied to 3.3V or 5V power source through a pull-high resistor. During shutdown state (EN = low) and the soft-start period, the PGOOD and PGOODA voltages are pulled low. After a successful soft-start and VDD and VDDNB output voltages are within the regulation limits, the PGOOD and PGOODA are released high individually.

The voltages at the PGOOD and PGOODA pins are pulled low individually during normal operation when any of the following events occurs: over-voltage protection, under-voltage protection, over-current protection, and logic low EN voltage. If one rail triggers protection, another rail's PGOOD will be pull low after 5µs delay.

#### **SVI2 Wire Protocol**

The RT8880B complies with AMD's Voltage Regulator Specification, which defines the Serial VID Interface 2 (SVI2) protocol. With SVI2 protocol, the processor directly controls the reference voltage level of each individual controller channel and determines which controller operates in power saving mode. The SVI2 interface is a three-wire bus that connects a single master to one or above slaves. The master initiates and terminates SVI2 transactions and drives the clock, SVC, and the data, SVD, during a transaction. The slave drives the telemetry, SVT during a transaction. The AMD processor is always the master. The voltage regulator controller (RT8880B) is always the slave. The RT8880B receives the SVID code and acts accordingly. The SVI protocol supports 20MHz high speed mode I<sup>2</sup>C, which is based on SVD data packet. Table 8 shows the SVD data packet. A SVD packet consists of a "Start" signal, three data bytes after each byte, and a "Stop" signal. The 8-bit serial VID codes are listed in Table 1. After the RT8880B has received the stop sequence, it decodes the received serial VID code and executes the command. The controller has the ability to sample and report voltage and current for the VDD and VDDNB domains. The controller reports this telemetry serially over the SVT wire which is clocked by the processor driven SVC. A bit TFN at SVD packet along with the VDD and VDDNB domain selector bits are used by the processor to change the telemetry functionality. The telemetry bit definition is listed in Figure 4. The detailed SVI2 specification is outlined in the AMD Voltage Regulator and Voltage Regulator Module (VRM) and Serial VID Interface 2.0 (SVI2) Specification.

Table 8. SVD Data Packet

Bit Time	Description
1:5	Always 11000b
6	VDD domain selector bit, if set then the following two data bytes contain the VID for VDD, the PSI state for VDD, and the load-line slope trim and offset trim state for VDD.
7	VDDNB domain selector bit, if set then the following two data bytes contain the VID for VDDNB, the PSI state for VDDNB, and the load-line slope trim and offset trim state for VDDNB.
8	Always 0b
10	PSI0_L
11 : 17	VID Code bits [7:1]
19	VID Code bit [0]

Copyright ©2022 Richtek Technology Corporation. All rights reserved. RICHTEK is a registered trademark of Richtek Technology Corporation.



Bit Time	Description			
20	PSI1_L			
21	TFN (Telemetry Functionality)			
22 : 24	Load Line Slope Trim [2:0]			
25 : 26	Offset Trim [1:0]			

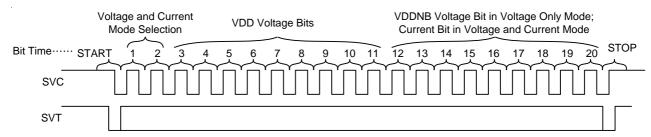


Figure 4. Telemetry Bit Definition

#### **PWROK and SVI2 Operation**

The PWROK pin is an input pin, which is connected to the global power good signal from the platform. Logic high at this pin enables the SVI2 interface, allowing data transaction between processor and the RT8880B. Once the RT8880B receives a valid SVID code, it decodes the information from processor to determine which output plane is going to move to the target VID. The internal DAC then steps the reference voltage in a controlled slew rate, making the output voltage shift to the required new VID. Depending on the SVID code, more than one controller channel can be targeted simultaneously in the VID transition. For example, VDD and VDDNB voltages can ramp up/down at the same time.

If the PWROK input goes low during normal operation, the SVI2 protocol stops running. The RT8880B immediately drives SVT high and modifies all output voltages back to the boot VID, which is stored in the internal register right after the controller is enabled. The controller does not read SVD and SVC inputs after the loss of PWROK. If the PWROK input goes high again, the SVI2 protocol resumes running. The RT8880B then waits to decode the SVID command from processor for a new VID and acts as previously described. The SVI2 protocol is only runs when the PWROK input goes high after the voltage at the EN pin goes high; otherwise, the RT8880B will not soft-start due to incorrect signal sequence.

#### **VID on-the-Fly Transition**

After the RT8880B has received a valid SVID code, it enters CCM mode and executes the VID on-the-Fly transition by stepping up/down the reference voltage of the required controller channel(s) in a controlled slew rate, hence allowing the output voltage(s) to ramp up/down to the target VID. The output voltage slew rate during the VID on-the-Fly transition is faster than that in a soft-start/soft-shutdown operation. If the new VID level is higher than the current VID level, the controller begins stepping up the reference voltage with a typical slew rate of  $12.5 \text{mV/}\mu\text{s}$  upward to the target VID level. If the new level is lower than the current VID level, the controller begins stepping down the reference voltage with a typical slew rate of  $-12.5 \text{mV/}\mu\text{s}$  downward to the target VID level.

During the VID on-the-Fly transition, the RT8880B will force the controller channel to operate in CCM mode. If the controller channel operates in the power-saving mode prior to the VID on-the-Fly transition, it will be in CCM mode during the transition and then back to the power saving mode at the end of the transition. The voltage at the PGOOD and PGOODA pins will keep high during the VID on-the-Fly transition. The RT8880B checks the output voltage for voltage-related protections and send a VOTF complete at the end of VID on-the-Fly transition. In the event of receiving a VID off code, the RT8880B steps the reference voltage of required controller channel down to zero, hence making the required output voltage decrease to zero. The voltage at the PGOOD pin and PGOODA pin will remain high since the VID code is valid.



#### **Power State Transition**

The RT8880B supports power state transition function in VDD and VDDNB VR for the PSI[x]\_L and command from AMD processor. The PSI[x]\_L bit in the SVI2 protocol controls the operating mode of the RT8880B controller channels. The default operation mode of VDD and VDDNB VR is CCM.

When the VDD VR is in N phase configuration and receives  $PSI0_L = 0$  and  $PSI1_L = 1$ , the VDD VR will entries single-phase diode emulation mode. When the VDD VR receives  $PSI0_L = 0$  and  $PSI1_L = 0$ , the VDD VR remains diode emulation mode. In reverse, the VDD VR goes back to N phase operation in CCM upon receiving  $PSI0_L = 1$  and  $PSI1_L = 0$  or 1, see Table 9. When the VDDNB VR receives  $PSI0_L = 0$  and  $PSI1_L = 1$ , it enters single-phase diode emulation mode, when the VDDNB VR receives  $PSI0_L = 0$  and  $PSI1_L = 0$ , it remains single-phase diode emulation mode. When the VDDNB VR goes back to full-phase CCM operation after receiving  $PSI0_L = 1$  and  $PSI1_L = 0$  or 1, see Table 10.

Table 9. VDD VR Power State

Full Phase Number	PSI0_L : PSI1_L	Mode
	11 or 10	3 phase CCM
3	01	1 phase DEM
	00	1 phase DEM
	11 or 10	2 phase CCM
2	01	1 phase DEM
	00	1 phase DEM
	11 or 10	1 phase CCM
1	01	1 phase DEM
	00	1 phase DEM

Table 10. VDDNB VR Power State

Full Phase Number	PSI0_L : PSI1_L	Mode
	11 or 10	2 phase CCM
2	01	1 phase DEM
	00	1 phase DEM
	11 or 10	1 phase CCM
1	01	1 phase DEM
	00	1 phase DEM

#### **Differential Remote Sense Setting**

The VDD and VDDNB controllers have differential, remotesense inputs to eliminate the effects of voltage drops along the PC board traces, processor internal power routes and socket contacts. The processor contains on-die sense pins, VDD\_SENSE, VDDNB\_SENSE and VSS\_SENSE. Connect RGND to VSS\_SENSE. For VDD controller, connect FB to VDD\_SENSE with a resistor to build the negative input path of the error amplifier. Connect FBA to VDDNB\_SENSE with a resistor using the same way in VDD controller. Connect VSS\_SENSE to RGND using separate trace as shown in Figure 5. The precision reference voltages refer to RGND for accurate remote sensing.




Figure 5. Differential Remote Voltage Sense Connection

#### **SET1 and SET2 Pin Setting**

The RT8880B provides the SET1 pin for platform users to set the VDD and VDDNB controller OCP\_TDC threshold, DVIDx compensation bit1 and internal ramp amplitude (RSET & RSETA), and the SET2 pin to set VDD and VDDNB controller OCP trigger delay (OCPTRGDELAY), DVIDx compensation bit0, external offset function VDDNB zero load-line and quick response threshold (QRTH & QRTHA). To set these pin, platform designers should use resistive voltage divider on these pins, refer to Figure 6 and Figure 7. The voltages at the the SET1 and SET2 pins are:

$$V_{SET1} = VCC \times \frac{R_{SET1,D}}{R_{SET1,U} + R_{SET1,D}}$$
 (1)

$$V_{SET2} = VCC \times \frac{R_{SET2,D}}{R_{SET2,U} + R_{SET2,D}}$$
 (2)

Copyright ©2022 Richtek Technology Corporation. All rights reserved. RICHTEK is a registered trademark of Richtek Technology Corporation.



The ADC monitors and decodes the voltage at this pin only once after power up. After ADC decoding (only once), a 40µA current (when VCC = 5V) will be generated at the SET1 and SET2 pin for internal use. That is the voltage at SET1 and SET2 pin is

$$\Delta V_{SET1} = 40\mu A \times \frac{R_{SET1,U} \times R_{SET1,D}}{R_{SET1,U} + R_{SET1,D}}$$
 (3)

$$\Delta V_{SET2} = 40\mu A \times \frac{R_{SET2,U} \times R_{SET2,D}}{R_{SET2,U} + R_{SET2,D}}$$
(4)

From equation (1) to equation (4) and Table 2 to Table 5, platform users can set the OCP TDC threshold, OCP trigger delay, internal ramp amplitude, DVIDx compensation parameter, VDDNB zero load-line setting and quick response threshold for VDD and VDDNB controller.

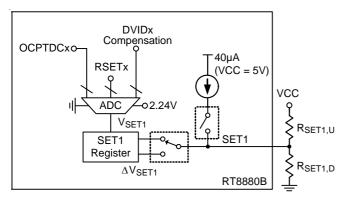


Figure 6. SET1 Pin Setting

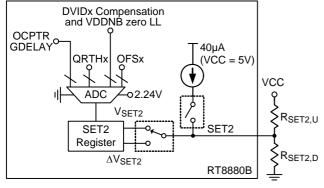


Figure 7. SET2 Pin Setting

#### **VDD Controller**

#### **Active Phase Determination**

The number of active phases is determined by the internal circuitry that monitors the ISENxN voltages during startup. Normally, the VDD controller operates as a 3-phase PWM controller. Pulling ISEN3N to VCC programs a 2phase operation, and pulling ISEN2N to VCC programs a 1-phase operation. At EN rising edge, VDD controller detects whether the voltages of ISEN2N and ISEN3N are higher than "VCC - 0.5V" respectively to decide how many phases should be active. Phase selection is only active during IC POR. When POR = high, the number of active phases is determined and latched. The unused ISENxP pins are recommended to be connected to VCC and unused PWM pins can be left floating.

#### **Loop Control**

The VDD controller adopts Richtek's proprietary G-NAVP<sup>TM</sup> topology. The G-NAVP<sup>TM</sup> is based on the finite gain peak current mode with CCRCOT (Constant Current Ripple Constant On-Time) topology. The output voltage, V<sub>VDD</sub> will decrease with increasing output load current. The control loop consists of PWM modulators with power stages, current sense amplifiers and an error amplifier as shown in Figure 8.

Similar to the peak current mode control with finite compensator gain, the HS\_FET on-time is determined by CCRCOT on-time generator. When load current increases, V<sub>CS</sub> increases, the steady state COMP voltage also increases and induces V<sub>OUT,VDD</sub> to decrease, thus achieving AVP. A near-DC offset canceling is added to the output of EA to eliminate the inherent output offset of finite gain peak current mode controller.

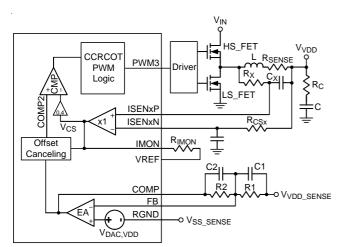


Figure 8. VDD Controller: Simplified Schematic for Droop and Remote Sense in CCM

#### **Droop Setting**

It is very easy to achieve Active Voltage Positioning (AVP) by properly setting the error amplifier gain due to the native droop characteristics as shown in Figure 9. This target is to have

$$V_{VDD} = V_{DAC, VDD} - I_{LOAD} \times R_{DROOP}$$
 (5)

Then solving the switching condition  $V_{COMP2} = V_{CS}$  in Figure 8 yields the desired error amplifier gain as

$$A_{V} = \frac{R2}{R1} = \frac{G_{I}}{R_{DROOP}} \tag{6}$$

$$G_{I} = \frac{R_{SENSE}}{R_{CSx}} \times R_{IMON} \times \frac{4}{10}$$
 (7)

where  $G_l$  is the internal current sense amplifier gain.  $R_{\text{SENSE}}$  is the current sense resistor. If no external sense resistor present, it is the equivalent resistance of the inductor.  $R_{\text{DROOP}}$  is the equivalent load-line resistance as well as the desired static output impedance.

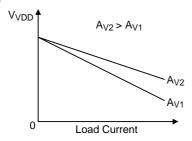


Figure 9. VDD Controller : Error Amplifier gain  $(A_V)$ Influence on  $V_{VDD}$  Accuracy

#### **Loop Compensation**

Optimized compensation of the VDD controller allows for best possible load step response of the regulator's output. A type-I compensator with one pole and one zero is adequate for proper compensation. Figure 10 shows the compensation circuit. Previous design procedure shows how to select the resistive feedback components for the error amplifier gain. Next, C1 and C2 must be calculated for compensation. The target is to achieve constant resistive output impedance over the widest possible frequency range.

The pole frequency of the compensator must be set to compensate the output capacitor ESR zero:

$$f_{P} = \frac{1}{2\pi \times C \times R_{C}} \tag{8}$$

Where C is the capacitance of output capacitor, and  $R_{\text{C}}$  is the ESR of output capacitor. C2 can be calculated as follows :

$$C2 = \frac{C \times R_C}{R2} \tag{9}$$

The zero of compensator has to be placed at half of the switching frequency to filter the switching related noise. Such that,



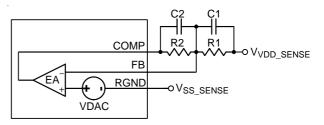


Figure 10. VDD Controller: Compensation Circuit

#### **TON Setting**

High frequency operation optimizes the application for the smaller component size, trading off efficiency due to higher switching losses. This may be acceptable in ultra portable devices where the load currents are lower and the controller is powered from a lower voltage supply.

Copyright ©2022 Richtek Technology Corporation. All rights reserved. RICHTEK is a registered trademark of Richtek Technology Corporation.



Low frequency operation offers the best overall efficiency at the expense of component size and board space. Figure 11 shows the On-Time setting circuit. Connect a resistor (R<sub>TON</sub>) between V<sub>IN</sub> and TONSET to set the ontime of UGATE:

$$t_{ON} (0.5V \le V_{DAC} < 1.8V) = \frac{24.4 \times 10^{-12} \times R_{TON}}{V_{IN} - V_{DAC}}$$
 (11)

where ton is the UGATE turn-on period, V<sub>IN</sub> is Input voltage of the VDD controller, and V<sub>DAC</sub> is the DAC voltage.

When V<sub>DAC</sub> is larger than 1.8V, the equivalent switching frequency may be over 500kHz, and this too fast switching frequency is unacceptable. Therefore, the VDD controller implements a pseudo constant frequency technology to avoid this disadvantage of CCRCOT topology. When VDAC is larger than 1.8V, the on-time equation will be modified to:

$$t_{ON} (V_{DAC} \ge 1.8V) = \frac{13.55 \times 10^{-12} \times R_{TON} \times V_{DAC}}{V_{IN} - V_{DAC}} (12)$$

On-time translates only roughly to switching frequencies.

For better efficiency of the given load range, the maximum switching frequency is suggested to be:

$$\begin{split} f_{SW(MAX)} &= \\ & V_{DAC(MAX)} + I_{LOAD(MAX)} \times \left(DCR_L + R_{ON\_LS\text{-}FET} - R_{DROOP}\right) \\ & \left[ V_{IN(MAX)} + I_{LOAD(MAX)} \times \left(R_{ON\_LS\text{-}FET} - R_{ON\_HS\text{-}FET}\right) \right] \times \left(T_{ON} - T_D + T_{ON,VAR}\right) + I_{LOAD(MAX)} \times \left(R_{ON\_LS\text{-}FET}\right) \times T_D \end{split}$$

Where  $f_{S(MAX)}$  is the maximum switching frequency,  $T_D$  is the driver dead time, T<sub>ON,VAR</sub> is the TON variation value.  $V_{DAC(MAX)}$  is the Maximum  $V_{DAC}$  of application,  $V_{IN(MAX)}$  is the Maximum application Input voltage, I<sub>LOAD(MAX)</sub> is the maximum load of application, RON LS-FET is the onresistance of low side FET R<sub>DS(ON)</sub>, R<sub>ON\_HS-FET</sub> is the of resistance of high side FET R<sub>DS(ON)</sub>, DCR<sub>L</sub> is the equivalent resistance of the inductor, and RDROOP is the load-line setting.




Figure 11. VDD Controller: On-Time Setting with R<sub>C</sub> filter

#### **Current Sense Setting**

The current sense topology of the VDD controller is continuous inductor current sensing. Therefore, the controller has less noise sensitive. Low offset amplifiers are used for current balance, loop control and over current detection. The ISENxP and ISENxN pins denote the positive and negative input of the current sense amplifier of each phase.

Users can either use a current sense resistor or the inductor's DCR<sub>L</sub> for current sensing. Using the inductor's DCR<sub>L</sub> allows higher efficiency as shown in Figure 12.

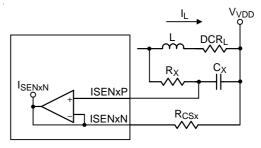


Figure 12. VDD Controller: Lossless Inductor Sensing

In order to optimize transient performance, R<sub>X</sub> and C<sub>X</sub> must be set according to the equation below:

$$\frac{L}{DCR_L} = R_X \times C_X \tag{14}$$

Then the proportion between the phase current, I<sub>L</sub>, and the sensed current, I<sub>SENxN</sub>, is driven by the value of the effective sense resistance, R<sub>CSx</sub>, and the DCR<sub>L</sub> of the inductor. The resistance value of R<sub>CSx</sub> is limited by the internal circuitry. The recommended value is from  $500\Omega$ to 1.2k $\Omega$ .

$$I_{SENxN} = I_{L} \times \frac{DCR_{L}}{R_{CSx}}$$
 (15)

Considering the inductance tolerance, the resistor R<sub>X</sub> has to be tuned on board by examining the transient voltage. If the output voltage transient has an initial dip below the minimum load-line requirement and the response time is too fast causing a ring back, the value of resistance should be increased. Vice versa, with a high resistance, the output voltage transient has only a small initial dip with a slow response time.



Using current sense resistor in series with the inductor can have better accuracy, but the efficiency is a trade-off. Considering the equivalent inductance (L<sub>ESL</sub>) of the current sense resistor, an RC filter is recommended. The RC filter calculation method is similar to the above mentioned inductor equivalent resistance sensing method.

#### **Per-Phase Over Current Protection**

The VDD controller provides over current protection in each phase. For VDD controller in three-phase configuration, either phase can trigger Per-Phase Over Current Protection (PHOCP).

The VDD controller senses each phase inductor current  $I_L$ , and PHOCP comparator compares sensed current with PHOCP threshold current, as shown in Figure 13.




Figure 13. VDD Controller: Per-Phase OCP Setting

The resistor R<sub>CSx</sub> determines PHOCP threshold.

$$I_{L,PERPHASE(MAX)} \times \frac{DCR_L}{R_{CSx}} \times \frac{1}{8} = 10\mu A$$
 (16)

$$R_{CSx} = \frac{I_{L,PERPHASE(MAX)} \times DCR_{L}}{8 \times 10 \mu A}$$
 (17)

The controller will turn off all high-side/low-side MOSFETs to protect CPU if the per-phase over current protection is triggered.

#### **Current Balance**

The VDD controller implements internal current balance mechanism in the current loop. The VDD controller senses and compares per-phase current signal with average current. If the sensed current of any particular phase is larger than average current, the on-time of this phase will be adjusted to be shorter.

# Initial Offset and External Offset (Over Clocking Offset Function)

The VDD controller features over clocking offset function which provides the possibility of wide range offset of output voltage. The initial offset function can be implemented through the SVI interface. When the OFS pin voltage < 0.3V at EN rising edge, the initial offset is disabled. The external offset function can be implemented by the SET2 pin setting. For example, referring to Table 11, when the both rail external offset functions are enabled, the output voltage is :

$$V_{VDD} = V_{DAC} - I_{LOAD} \times R_{DROOP} + V_{External\_OFS} + V_{Initial\_OFS}$$
 (18)

V<sub>Initial\_OFS</sub> is the initial offset voltage set by SVI interface, and the external offset voltage, V<sub>External\_OFS</sub> is set by supplying a voltage into the OFS pin.

It can be calculated as below:

$$V_{\text{External OFS}} = V_{\text{OFS}} - 1.2V$$
 (19)

If supplying 1.3V at OFS pin, it will achieve 100mV offset at the output. Connecting a filter capacitor between the OFS and GND pins is necessary. Designers can design the offset slew rate by properly setting the filter bandwidth.

Table 11. External Offset Function Setting for VDD and VDDNB Controller

Core_ OFFSET_ EN	NB_ OFFSET_ EN	Description	
0	0	Disable external offset function.	
0	1	NB rail external offset is set by OFS pin voltage.	
1	0	Core rail external offset is set by OFSA pin voltage.	
1	1	Core rail external offset is set by OFS pin voltage, and NB rail external offset is set by OFSA pin voltage.	

#### **Dynamic VID Enhancement**

During a dynamic VID event, the charging (dynamic VID up) or discharging (dynamic VID down) current causes unwanted load-line effect which degrades the settling time performance. The RT8880B will hold the inductor current to hold the load-line during a dynamic VID event. The VDD

Copyright ©2022 Richtek Technology Corporation. All rights reserved. RICHTEK is a registered trademark of Richtek Technology Corporation.



controller will always enter three-phase configuration when VDD controller receives dynamic VID up and VDD controller will hold the operating state when VDD controller receives dynamic VID down.

The RT8880B also has DVID compensation which can boost up the Dynamic VID slew rate and adjust the voltage onthe-fly complete timing. The DVID compensation parameter can be selected by DVIDx compensation bits using the SET1 and SET2 pins.

#### Ramp Amplitude Adjust

When the VDD controller takes phase shedding operation and enters diode emulation mode, the internal ramp of VDD controller will be modified for the reason of stability. In case of smooth transition into DEM, the CCM ramp amplitude should be designed properly. The RT8880B provides the SET1 pin for platform users to set the ramp amplitude of the VDD controller in CCM.

#### **Current Monitoring and Current Reporting**

The VDD controller provides current monitoring function via inductor current sensing. In the G-NAVP™ technology, the output voltage is dependent on output current, and the current monitoring function is achieved by this characteristic of output voltage. The equivalent output current will be sensed from inductor current sensing and mirrored to the IMON pin. The resistor connected to the IMON pin determines voltage of the IMON output.

$$V_{\text{IMON}} = I_{\text{L,SUM}} \times \frac{\text{DCR}_{\text{L}}}{R_{\text{CSx}}} \times R_{\text{IMON}} + 0.64$$
 (20)

Where I<sub>L</sub> is the phase current, R<sub>CSx</sub> is the effective sense resistance, and  $R_{\text{IMON}}$  is the current monitor current setting resistor. Note that the IMON pin cannot be monitored.

The ADC circuit of the VDD controller monitors the voltage variation at the IMON pin from 0V to 3.19375V, and this voltage is decoded into digital format and stored into Output\_Current register. The ADC divides 3.19375V into 511 levels, so LSB = 3.19375V / 511 = 6.25mV.

#### **Quick Response**

The VDD controller utilizes a quick response feature to support heavy load current demand during instantaneous load transient. The VDD controller monitors the current of the  $V_{\text{VDD SENSE}}$ , and this current is mirrored to internal quick response circuit. At steady state, this mirrored current will not trigger a quick response. When the V<sub>VDD</sub> SENSE voltage drops abruptly due to load apply transient, the mirrored current flowing into quick response circuit will also increase instantaneously.

The QR threshold setting for VDD controller refers to Table 4.




Figure 14. VDD Controller: Quick Response Triggering Circuit

When quick response is triggered, the quick response circuit will generate a quick response pulse. The pulse width of quick response is almost the same as ton.

After generating a quick response pulse, the pulse is then applied to the on-time generating circuit, and all the active phases' on-time will be overridden by the quick response pulse.

#### **Over-Current Protection**

The RT8880B has dual OCP mechanism. The dual OCP mechanism has two types of thresholds. The first type, referred to as OCP-TDC, is a time and current based threshold. OCP-TDC should trip when the average output current exceeds TDC by some percentage and for a period of time. This period of time is referred to as the trigger delay. The second type, referred to as OCP-SPIKE, is a current based threshold. OCP-SPIKE should trip when the cycle-by-cycle output current exceeds IDDSPIKE by some percentage. If either mechanism trips, then the VDD controller asserts OCP\_L and delays any further action. This delay is called an action delay. Refer to action delay time. After the action delay has expired and the VDD controller has allowed its current sense filter to settle out and the current has not decreased below the threshold. then the VDD controller will turn off both high-side MOSFETs and low-side MOSFETs of all channels.

Copyright ©2022 Richtek Technology Corporation. All rights reserved. RICHTEK is a registered trademark of Richtek Technology Corporation.



Users can set OCP-SPIKE threshold,  $I_{L,SUM(SPIKE)}$ , by the current monitor resistor  $R_{IMON}$  of the following equation :

$$I_{L,SUM} (SPIKE) = \frac{3.19375 - 0.64}{DCR_I} \times \frac{R_{CSX}}{R_{IMON}}$$
 (21)

And set the OCP-TDC threshold,  $I_{L(TDC)}$ , refer to some percentage of OCP-SPIKE through Table 2.

#### **Over-Voltage Protection (OVP)**

The over-voltage protection circuit of the VDD controller monitors the output voltage via the VSEN pin after IC POR. When VID is lower than 0.9V, once VSEN voltage exceeds "0.9V + 325mV", OVP is triggered and latched. When VID is larger than 0.9V, once VSEN voltage exceeds the internal reference by 325mV, OVP is triggered and latched. The VDD controller will try to turn on low-side MOSFETs and turn off high-side MOSFETs of all active phases of the VDD controller to protect the CPU. When OVP is triggered by one rail, the other rail will also enter soft shut down sequence. A  $1\mu s$  delay is used in OVP detection circuit to prevent false trigger.

#### **Negative-Voltage Protection (NVP)**

During OVP latch state, the VDD controller also monitors the VSEN pin for negative voltage protection. Since the OVP latch continuously turns on all low-side MOSFETs of the VDD controller, the VDD controller may suffer negative output voltage. As a consequence, when the  $V_{\rm SEN}$  voltage drops below 0V after triggering OVP, the VDD controller will trigger NVP to turn off all low-side MOSFETs of the VDD controller while the high-side MOSFETs remains off. After triggering NVP, if the output voltage rises above 0V, the OVP latch will restart to turn on all low-side MOSFETs. The NVP function will be active only after OVP is triggered.

#### **Under-Voltage Protection (UVP)**

The VDD controller implements under-voltage protection of  $V_{OUT,VDD}$ . If VSEN voltage is less than the internal reference by 500mV, the VDD controller will trigger UVP latch. The UVP latch will turn off both high-side and low-side MOSFETs. When UVP is triggered by one rail, the other rail will also enter soft shutdown sequence. A  $3\mu s$  delay is used in UVP detection circuit to prevent false trigger.

#### **Under-Voltage Lock Out (UVLO)**

During normal operation, if the voltage at the VCC pin drops below IC POR threshold, the VDD controller will trigger UVLO. The UVLO protection forces all high-side MOSFETs and low-side MOSFETs off by shutting down internal PWM logic drivers. A 3µs delay is used in UVLO detection circuit to prevent false trigger.

#### **VDDNB Controller**

#### **Active Phase Determination**

The number of active phases is determined by the internal circuitry that monitors the ISENA2N voltage during startup. Normally, the VDDNB controller operates as a 2-phase PWM controller. Pulling ISENA2N to VCC programs a 1-phase operation. At EN rising edge, VDDNB controller detects whether the voltages of ISENA2N is higher than "VCC -0.5V" respectively to decide how many phases should be active. Phase selection is only active during IC POR. When POR = high, the number of active phases is determined and latched. The unused ISENA2P pin is recommended to be connected to VCC and unused PWM pin can be left floating.

#### **Loop Control**

The VDDNB controller adopts Richtek's proprietary G-NAVP<sup>TM</sup> topology. The G-NAVP<sup>TM</sup> is based on the finite gain peak current mode with CCRCOT (Constant Current Ripple Constant On-Time) topology. The output voltage, V<sub>VDDNB</sub> will decrease with increasing output load current. The control loop consists of PWM modulators with power stages, current sense amplifiers and an error amplifier as shown in Figure 15.

Similar to the peak current mode control with finite compensator gain, the HS\_FET on-time is determined by CCRCOT on-time generator. When load current increases,  $V_{CS}$  increases, the steady state COMPA voltage also increases and induces  $V_{VDDNB}$  to decrease, thus achieving AVP. A near-DC offset canceling is added to the output of EA to eliminate the inherent output offset of finite gain peak current mode controller.

Copyright ©2022 Richtek Technology Corporation. All rights reserved. RICHTEK is a registered trademark of Richtek Technology Corporation.

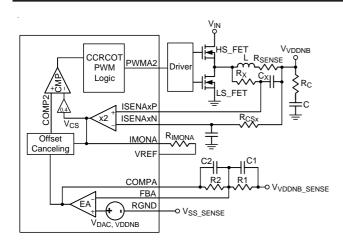


Figure 15. VDDNB Controller: Simplified Schematic for Droop and Remote Sense in CCM

#### **Droop Setting**

It is very easy to achieve Active Voltage Positioning (AVP) by properly setting the error amplifier gain due to the native droop characteristics as shown in Figure 16. This target is to have

$$V_{VDDNB} = V_{DAC,VDDNB} - I_{LOAD} \times R_{DROOP}$$
 (22)

Then solving the switching condition  $V_{COMP2} = V_{CS}$  in Figure 15 yields the desired error amplifier gain as

$$A_{V} = \frac{R2}{R1} = \frac{G_{I}}{R_{DROOP}}$$
 (23)

where 
$$G_I = \frac{R_{SENSE}}{R_{CSx}} \times R_{IMON} \times \frac{8}{10}$$
 (24)

where  $G_{l}$  is the internal current sense amplifier gain.  $R_{\text{SENSE}}$ is the current sense resistor. If no external sense resistor present, it is the equivalent resistance of the inductor. R<sub>DROOP</sub> is the equivalent load-line resistance as well as the desired static output impedance.

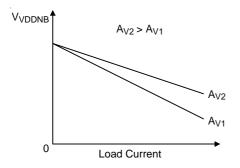


Figure 16. VDDNB Controller: Error Amplifier gain (A<sub>V</sub>) Influence on V<sub>VDDNB</sub> Accuracy

#### **Loop Compensation**

Optimized compensation of the VDDNB controller allows for best possible load step response of the regulator's output. A type-I compensator with one pole and one zero is adequate for proper compensation. Figure 17 shows the compensation circuit. Previous design procedure shows how to select the resistive feedback components for the error amplifier gain. Next, C1 and C2 must be calculated for compensation. The target is to achieve constant resistive output impedance over the widest possible frequency range.

The pole frequency of the compensator must be set to compensate the output capacitor ESR zero:

$$f_{P} = \frac{1}{2\pi \times C \times R_{C}} \tag{25}$$

Where C is the capacitance of output capacitor, and R<sub>C</sub> is the ESR of output capacitor. C2 can be calculated as

$$C2 = \frac{C \times R_C}{R2}$$
 (26)

The zero of compensator has to be placed at half of the switching frequency to filter the switching related noise. Such that.

$$C1 = \frac{1}{R1 \times \pi \times f_{SW}}$$
 (27)

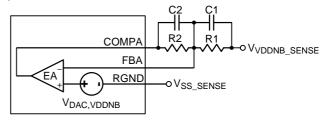


Figure 17. VDDNB Controller: Compensation Circuit

#### **TON Setting**

High frequency operation optimizes the application for the smaller component size, trading off efficiency due to higher switching losses. This may be acceptable in ultra portable devices where the load currents are lower and the controller is powered from a lower voltage supply. Low frequency operation offers the best overall efficiency at the expense of component size and board space. Figure 18 shows the On-Time setting circuit. Connect a resistor (R<sub>TON</sub>) between V<sub>IN</sub> and TONSETA to set the on-time of **UGATE:** 

Copyright ©2022 Richtek Technology Corporation. All rights reserved. RICHTEK is a registered trademark of Richtek Technology Corporation.

$$t_{ON} (0.5V \le V_{DAC} < 1.8V) = \frac{24.4 \times 10^{-12} \times R_{TON}}{V_{IN} - V_{DAC,VDDNB}}$$
 (28)

where  $t_{ON}$  is the UGATE turn-on period,  $V_{IN}$  is Input voltage of the VDDNB controller, and  $V_{DAC,VDDNB}$  is the DAC voltage.

When  $V_{DAC,VDDNB}$  is larger than 1.8V, the equivalent switching frequency may be over 500kHz, and this too fast switching frequency is unacceptable. Therefore, the VDDNB controller implements a pseudo constant frequency technology to avoid this disadvantage of CCRCOT topology. When  $V_{DAC,VDDNB}$  is larger than 1.8V, the on-time equation will be modified to:

$$t_{ON} (V_{DAC} \ge 1.8V)$$

$$=\frac{13.55\times10^{-12}\times R_{TON}\times V_{DAC,VDDNB}}{V_{IN}-V_{DAC,VDDNB}}$$
(29)

On-time translates only roughly to switching frequencies.

For better efficiency of the given load range, the maximum switching frequency is suggested to be:

$$\begin{split} f_{SW(MAX)} = & \\ & V_{DAC(MAX)} + I_{LOAD(MAX)} \times \left(DCR_L + R_{ON\_LS-FET} - R_{DROOP}\right) \\ & \left[ V_{IN(MAX)} + I_{LOAD(MAX)} \times \left(R_{ON\_LS-FET} - R_{ON\_HS-FET}\right) \right] \times \left(T_{ON} - T_D + T_{ON,VAR}\right) + I_{LOAD(MAX)} \times \left(R_{ON\_LS-FET}\right) \times T_D \end{split}$$

Where  $f_{S(MAX)}$  is the maximum switching frequency,  $T_D$  is the driver dead time,  $T_{ON,VAR}$  is the TON variation value.  $V_{DAC(MAX)}$  is the Maximum  $V_{DAC,VDDNB}$  of application,  $V_{IN(MAX)}$  is the Maximum application Input voltage,  $I_{LOAD(MAX)}$  is the maximum load of application,  $R_{ON\_LS\text{-}FET}$  is the on-resistance of low side FET  $R_{DS(ON)}$ ,  $R_{ON\_HS\text{-}FET}$  is the on-resistance of high side FET  $R_{DS(ON)}$ ,  $DCR_L$  is the inductor equivalent resistance of the inductor, and  $R_{DROOP}$  is the load-line setting.




Figure 18. VDDNB Controller : On-Time Setting with R<sub>C</sub> filter

#### **Current Sense Setting**

The current sense topology of the VDDNB controller is continuous inductor current sensing. Therefore, the controller has less sensitive noise. Low offset amplifiers are used for current balance, loop control and over current detection. The ISENAxP and ISENAxN pins denote the positive and negative input of the current sense amplifier of each phase.

Users can either use a current sense resistor or the inductor's  $DCR_L$  for current sensing. Using the inductor's  $DCR_L$  allows higher efficiency as shown in Figure 19.

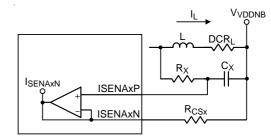


Figure 19. VDDNB Controller: Lossless Inductor Sensing

In order to optimize transient performance,  $R_X$  and  $C_X$  must be set according to the equation below :

$$\frac{L}{DCR_{I}} = R_{X} \times C_{X} \tag{31}$$

Then the proportion between the phase current,  $I_L$ , and the sensed current,  $I_{SENAxN}$ , is driven by the value of the effective sense resistance,  $R_{CSx}$ , and the DCR<sub>L</sub> of the inductor. The resistance value of  $R_{CSx}$  is limited by the internal circuitry. The recommended value is from  $500\Omega$  to  $1.2k\Omega$ .

$$I_{SENAXN} = I_{L} \times \frac{DCR_{L}}{R_{CSY}}$$
 (32)

Considering the inductance tolerance, the resistor  $R_X$  has to be tuned on board by examining the transient voltage. If the output voltage transient has an initial dip below the minimum load-line requirement and the response time is too fast causing a ring back, the value of resistance should be increased. Vice versa, with a high resistance, the output voltage transient has only a small initial dip with a slow response time.

Copyright ©2022 Richtek Technology Corporation. All rights reserved. RICHTEK is a registered trademark of Richtek Technology Corporation.



Using current sense resistor in series with the inductor can have better accuracy, but the efficiency is a trade-off. Considering the equivalent inductance (LESL) of the current sense resistor, an RC filter is recommended. The RC filter calculation method is similar to the above mentioned inductor equivalent resistance sensing method.

#### **Per-Phase Over Current Protection**

The VDDNB controller provides over current protection in each phase. For VDDNB controller in two-phase configuration, either phase can trigger Per-Phase Over Current Protection (PHOCP).

The VDDNB controller senses each phase inductor current IL, and PHOCP comparator compares sensed current with PHOCP threshold current, as shown in Figure 20.

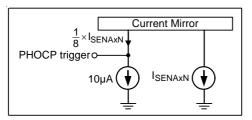


Figure 20. VDDNB Controller: Per-Phase OCP Setting

The resistor R<sub>CSx</sub> determines PHOCP threshold.

$$I_{L,PERPHASE(MAX)} \times \frac{DCR_L}{R_{CSx}} \times \frac{1}{8} = 10 \mu A$$
 (33)

$$R_{CSx} = \frac{I_{L,PERPHASE(MAX)} \times DCR_L}{8 \times 10 \mu A}$$
 (34)

The controller will turn off all high-side/low-side MOSFETs to protect CPU if the per-phase over current protection is triggered.

### Initial Offset and External Offset (Over Clocking Offset Function)

The VDDNB controller features over clocking offset function which provides the possibility of wide range offset of output voltage. The initial offset function can be implemented through the SVI interface. When the OFSA pin voltage < 0.3V at EN rising edge, the initial offset is disabled.

The external offset function can be implemented by the SET2 pin setting. For example, referring to Table 11, when the both rail external offset functions are enabled, the output voltage is:

$$V_{VDDNB} = V_{DAC,VDDNB} - I_{LOAD} \times R_{DROOP} + V_{External OFSA} + V_{Initial OFSA}$$
 (35)

V<sub>Initial OFSA</sub> is the initial offset voltage set by SVI interface, and the external offset voltage, V<sub>External OFSA</sub> is set by supplying a voltage into the OFSA pin.

It can be calculated as below:

$$V_{\text{External OFSA}} = V_{\text{OFSA}} - 1.2V$$
 (36)

If supplying 1.3V at OFSA pin, it will achieve 100mV offset at the output. Connecting a filter capacitor between the OFSA and GND pins is necessary. Designers can design the offset slew rate by properly setting the filter bandwidth.

#### **Dynamic VID Enhancement**

During a dynamic VID event, the charging (dynamic VID up) or discharging (dynamic VID down) current causes unwanted load-line effect which degrades the settling time performance. The RT8880B will hold the inductor current to hold the load-line during a dynamic VID event. The VDDNB controller will always enter two-phase configuration when VDDNB controller receives dynamic VID up and VDDNB controller will hold the operating state when VDDNB controller receives dynamic VID down.

The RT8880B also has DVID compensation which can boost up the Dynamic VID slew rate and adjust the voltage onthe-fly complete timing. The DVID compensation parameter can be selected by DVIDx compensation bits using the SET1 and SET2 pins.

#### Ramp Amplitude Adjust

When the VDDNB controller takes phase shedding operation and enters diode emulation mode, the internal ramp of VDDNB controller will be modified for the reason of stability. In case of smooth transition into DEM, the CCM ramp amplitude should be designed properly. The RT8880B provides the SET1 pin for platform users to set the ramp amplitude of the VDDNB controller in CCM.

#### **Current Monitoring and Current Reporting**

The VDDNB controller provides current monitoring function via inductor current sensing. In the G-NAVP<sup>TM</sup> technology, the output voltage is dependent on output current, and the current monitoring function is achieved by this characteristic of output voltage. The equivalent output current will be sensed from inductor current sensing and mirrored to the IMONA pin. The resistor connected to the IMONA pin determines voltage of the IMONA output.

$$V_{IMONA} = I_{L,SUM} \times 2 \times \frac{DCR_L}{R_{CSx}} \times R_{IMONA} + 0.64$$
 (37)

Where  $I_L$  is the phase current,  $R_{CSx}$  is the effective sense resistance, and  $R_{IMONA}$  is the current monitor current setting resistor. Note that the IMONA pin cannot be monitored.

The ADC circuit of the VDDNB controller monitors the voltage variation at the IMONA pin from 0V to 3.19375V, and this voltage is decoded into digital format and stored into Output\_Current register. The ADC divides 3.19375V into 511 levels, so LSB = 3.19375V / 511 = 6.25mV.

#### **Quick Response**

The VDDNB controller utilizes a quick response feature to support heavy load current demand during instantaneous load transient. The VDDNB controller monitors the current of the V<sub>VDDNB\_SENSE</sub>, and this current is mirrored to internal quick response circuit. At steady state, this mirrored current will not trigger a quick response. When the V<sub>VDDNB\_SENSE</sub> voltage drops abruptly due to load apply transient, the mirrored current flowing into quick response circuit will also increase instantaneously.

The QR threshold setting for VDDNB controller refers to Table 5.




Figure 21. VDDNB Controller : Quick Response Triggering Circuit

When quick response is triggered, the quick response circuit will generate a quick response pulse. The pulse width of quick response is almost the same as  $t_{\text{ON}}$ .

After generating a quick response pulse, the pulse is then applied to the on-time generation circuit, and all the active phases' on-times will be overridden by the quick response pulse.

#### **Over-Current Protection**

The RT8880B has dual OCP mechanism. The dual OCP mechanism has two types of thresholds. The first type, referred to as OCP-TDCA, is a time and current based threshold. OCP-TDCA should trip when the average output current exceeds TDCA by some percentage and for a period of time. This period of time is referred to as the trigger delay. The second type, referred to as OCP-SPIKEA, is a current based threshold. OCP-SPIKEA should trip when the cycle-by-cycle output current exceeds IDDSPIKEA by some percentage. If either mechanism trips, then the VDDNB controller asserts OCP\_L and delays any further action. This delay is called an action delay. Refer to action delay time. After the action delay has expired and the VDDNB controller has allowed its current sense filter to settle out and the current has not decreased below the threshold, then the VDDNB controller will turn off both high-side MOSFETs and lowside MOSFETs of all channels.

Users can set OCP-SPIKEA threshold,  $I_{L,SUM(SPIKEA)}$ , by the current monitor resistor  $R_{IMONA}$  of the following equation :

$$I_{L,SUM} (SPIKE) = \frac{3.19375 - 0.64}{2 \times DCR} \times \frac{R_{CSX}}{R_{IMONA}}$$
 (38)

And set the OCP-TDCA threshold,  $I_{L(TDCA)}$ , refer to some percentage of OCP-SPIKEA through Table 3.

#### Over-Voltage Protection (OVP)

The over-voltage protection circuit of the VDDNB controller monitors the output voltage via the VSENA pin after IC POR. When VID is lower than 0.9V, once VSENA voltage exceeds "0.9V + 325mV", OVP is triggered and latched. When VID is larger than 0.9V, once VSENA voltage exceeds the internal reference by 325mV, OVP is triggered and latched. The VDDNB controller will try to turn on low-side MOSFETs and turn off high-side MOSFETs of all active phases of the VDDNB controller to protect the CPU. When OVP is triggered by one rail, the other rail will also enter soft shut down sequence. A 1 $\mu$ s delay is used in OVP detection circuit to prevent false trigger.

Copyright ©2022 Richtek Technology Corporation. All rights reserved. RICHTEK is a registered trademark of Richtek Technology Corporation.



#### **Negative-Voltage Protection (NVP)**

During OVP latch state, the VDDNB controller also monitors the VSENA pin for negative voltage protection. Since the OVP latch continuously turns on all low-side MOSFETs of the VDDNB controller, the VDDNB controller may suffer negative output voltage. As a consequence, when the VSENA voltage drops below 0V after triggering OVP, the VDDNB controller will trigger NVP to turn off all low-side MOSFETs of the VDDNB controller while the highside MOSFETs remains off. After triggering NVP, if the output voltage rises above 0V, the OVP latch will restart to turn on all low-side MOSFETs. The NVP function will be active only after OVP is triggered.

#### **Under-Voltage Protection (UVP)**

The VDDNB controller implements under-voltage protection of V<sub>OUT,VDDNB</sub>. If VSENA voltage is less than the internal reference by 500mV, the VDDNB controller will trigger UVP latch. The UVP latch will turn off both high-side and lowside MOSFETs. When UVP is triggered by one rail, the other rail will also enter soft shutdown sequence. A 3µs delay is used in UVP detection circuit to prevent false trigger.

#### **Under-Voltage Lock Out (UVLO)**

During normal operation, if the voltage at the VCC pin drops below IC POR threshold, the VDDNB controller will trigger UVLO. The UVLO protection forces all high-side MOSFETs and low-side MOSFETs off by shutting down internal PWM logic drivers. A 3µs delay is used in UVLO detection circuit to prevent false trigger.

#### **Thermal Considerations**

The junction temperature should never exceed the absolute maximum junction temperature T<sub>J(MAX)</sub>, listed under Absolute Maximum Ratings, to avoid permanent damage to the device. The maximum allowable power dissipation depends on the thermal resistance of the IC package, the PCB layout, the rate of surrounding airflow, and the difference between the junction and ambient temperatures. The maximum power dissipation can be calculated using the following formula:

 $P_{D(MAX)} = (T_{J(MAX)} - T_A) / \theta_{JA}$ 

where  $T_{J(MAX)}$  is the maximum junction temperature,  $T_A$  is the ambient temperature, and  $\theta_{JA}$  is the junction-to-ambient thermal resistance.

For continuous operation, the maximum operating junction temperature indicated under Recommended Operating Conditions is 125°C. The junction-to-ambient thermal resistance,  $\theta_{JA}$ , is highly package dependent. For a WQFN-52L 6x6 package, the thermal resistance,  $\theta_{JA}$ , is 26.5°C/W on a standard JEDEC 51-7 high effective-thermalconductivity four-layer test board. The maximum power dissipation at  $T_A = 25^{\circ}C$  can be calculated as below:

 $P_{D(MAX)} = (125^{\circ}C - 25^{\circ}C) / (26.5^{\circ}C/W) = 3.77W$  for a WQFN-52L 6x6 package.

The maximum power dissipation depends on the operating ambient temperature for the fixed  $T_{J(MAX)}$  and the thermal resistance,  $\theta_{JA}$ . The derating curves in Figure 22 allows the designer to see the effect of rising ambient temperature on the maximum power dissipation.


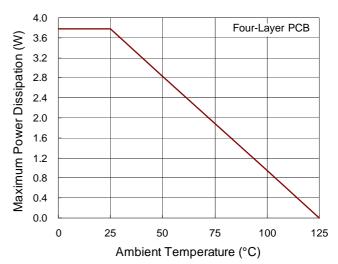


Figure 22. Derating Curve of Maximum Power Dissipation



# **Outline Dimension**

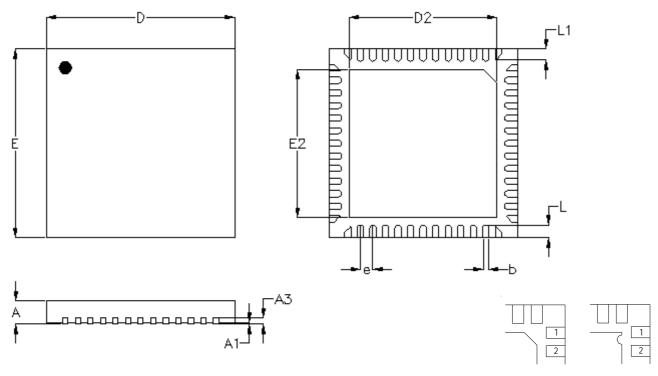

**DETAIL A** 

Pin #1 ID and Tie Bar Mark Options

Note: The configuration of the Pin #1 identifier is optional, but must be located within the zone indicated.

Symbol	Dimensions I	n Millimeters	Dimensions In Inches		
	Min.	Max.	Min.	Max.	
А	0.700	0.800	0.028	0.031	
A1	0.000	0.050	0.000	0.002	
А3	0.175	0.250	0.007	0.010	
b	0.150	0.250	0.006	0.010	
D	5.950	6.050	0.234	0.238	
D2	4.650	4.750	0.183	0.187	
Е	5.950	6.050	0.234	0.238	
E2	4.650	4.750	0.183	0.187	
е	0.400		0.0	116	
L	0.350	0.450	0.014	0.018	
L1	0.300	0.400	0.012	0.016	

W-Type 52L QFN 6x6 Package

Copyright ©2022 Richtek Technology Corporation. All rights reserved. RICHTEK is a registered trademark of Richtek Technology Corporation.

41

**RT8880B** 



### **Richtek Technology Corporation**

14F, No. 8, Tai Yuen 1<sup>st</sup> Street, Chupei City Hsinchu, Taiwan, R.O.C.

Tel: (8863)5526789

**RICHTEK** 

Richtek products are sold by description only. Richtek reserves the right to change the circuitry and/or specifications without notice at any time. Customers should obtain the latest relevant information and data sheets before placing orders and should verify that such information is current and complete. Richtek cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Richtek product. Information furnished by Richtek is believed to be accurate and reliable. However, no responsibility is assumed by Richtek or its subsidiaries for its use; nor for any infringements of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of Richtek or its subsidiaries.

www.richtek.com DS8880B-06 April 2022