

# 5A 1-4 Cell Buck-Boost Switching Battery Charger Evaluation Board

## ***General Description***

The Evaluation Board demonstrates the RT9492GQVF(2) to be designed for a highly-integrated 5A Buck-Boost switch mode battery charge management and system power path management device for 1-4 cell Li-Ion and Li-polymer battery. The low impedance power path optimizes switch-mode operation efficiency, reduces battery charging time and extends battery life during discharging phase. The I<sup>2</sup>C serial interface with charging and system settings makes the device a truly flexible solution.

## **Table of Contents**

General Description .....	1
Performance Sepcification Summary .....	2
Power-up Procedure .....	2
Detailed Description of Hardware .....	4
Bill of Materials.....	7
Typical Applications .....	9
Evaluation Board Layout.....	12
More Information.....	16
Important Notice for Richtek Evaluation Board.....	16

## Performance Specification Summary

Summary of the RT9492GQVF(2) Evaluation Board performance specification is provided in Table 1. The ambient temperature is 25°C.

Table 1. RT9492GQVF(2) Evaluation Board Performance Specification Summary

Specification	Test Conditions	Min	Typ	Max	Unit
Supply Input Voltage Range		3.6	--	24	V
Maximum Input Current		--	--	3.3	A
Maximum OTG Current	OTG mode	--	--	3.32	A
Maximum Output Current	(SW2), ISYS	--	--	5	A
Maximum Battery Voltage		--	--	18.8	V
Maximum Charge Current		--	--	5	A
Maximum Discharge Current		--	--	10	A

## Power-up Procedure

### Suggestion Required Equipments

- RT9492GQVF(2) Evaluation Board
- DC power supply capable of 24V, 3.3A
- Battery simulator capable of 18.8V, 10A
- Electronic load capable of 10A
- Oscilloscope

### Quick Start Procedures

The Evaluation Board is fully assembled and tested. Follow the steps below to verify board operation. Do not turn on supplies until all connections are made. When measuring the output voltage ripple, care must be taken to avoid a long ground lead on the oscilloscope probe. Measure the output voltage ripple by touching the probe tip and ground ring directly across the last output capacitor.

1. Use jumpers on JP22 to JP29 to set battery cells and switching frequency for default charging profile.

Battery Cell (s)	Switching Frequency	Jumper No.
1S	1.5MHz	JP22
	750kHz	JP23
2S	1.5MHz	JP24
	750kHz	JP25
3S	1.5MHz	JP26
	750kHz	JP27
4S	1.5MHz	JP28
	750kHz	JP29


2. Use jumpers on JP1 and JP2 to connect ACDRV1 and ACDRV2 to the gate driver output from IC. If the external AC-RBFETs are not needed, use jumpers on JP3 and JP4 to bypass them and JP1 and JP2 should be used to connect ACDRV1 and ACDRV2 to GND.
3. Use a jumper on JP8 with Mid-Right side to connect SDRV to the gate driver output from IC. If the external ship FET is not needed, use a jumper on JP5 to bypass it and use JP8 with Mid-Left side to connect SDRV to the capacitor.
4. Use a jumper on JP18 (TS\_NORMAL) or JP19 (TS\_POTENTIOMETER) for setting TS pin configuration and JP12 for connecting to REGN as pull-up voltage.
5. Use a jumper on JP13 (500mA) or JP14 (1.5A) for ILIM setting and JP21 for controlling HIZ\_EN.
6. Use a jumper on JP9 with Mid-Right side to connect BATTERY to BATP when the external Ship FET is adopted. If the external Ship FET is not needed, use a jumper on JP9 with Mid-Left side to connect BATP to VBAT.
7. Use a jumper on JP87 for connecting Type\_C\_IN on VAC1 or VAC2.

**Proper measurement equipment setup and follow the procedure below.**

- 1) With power off, connect input power and ground to VIN1 or VIN2 and PGND respectively.
- 2) With load off, connect electronic load to SYSTEM and PGND respectively.
- 3) With power off, connect power and ground to BATTERY and PGND respectively. Turn on battery simulator, then the device is powered up.
- 4) Use I2C to set registers for charging function and proper protection level.
- 5) Turn on the input power supply to start charging. Make sure that the power supply voltage is under OVP level.
- 6) Check the output charging current using a current meter.
- 7) Once the proper charging current is established observe the output voltage regulation, ripple voltage, efficiency and other performance.
- 8) For testing SYS load, turns on the electronic load and adjusts SYS current.

**Detailed Description of Hardware**

**Headers Description and Placement**

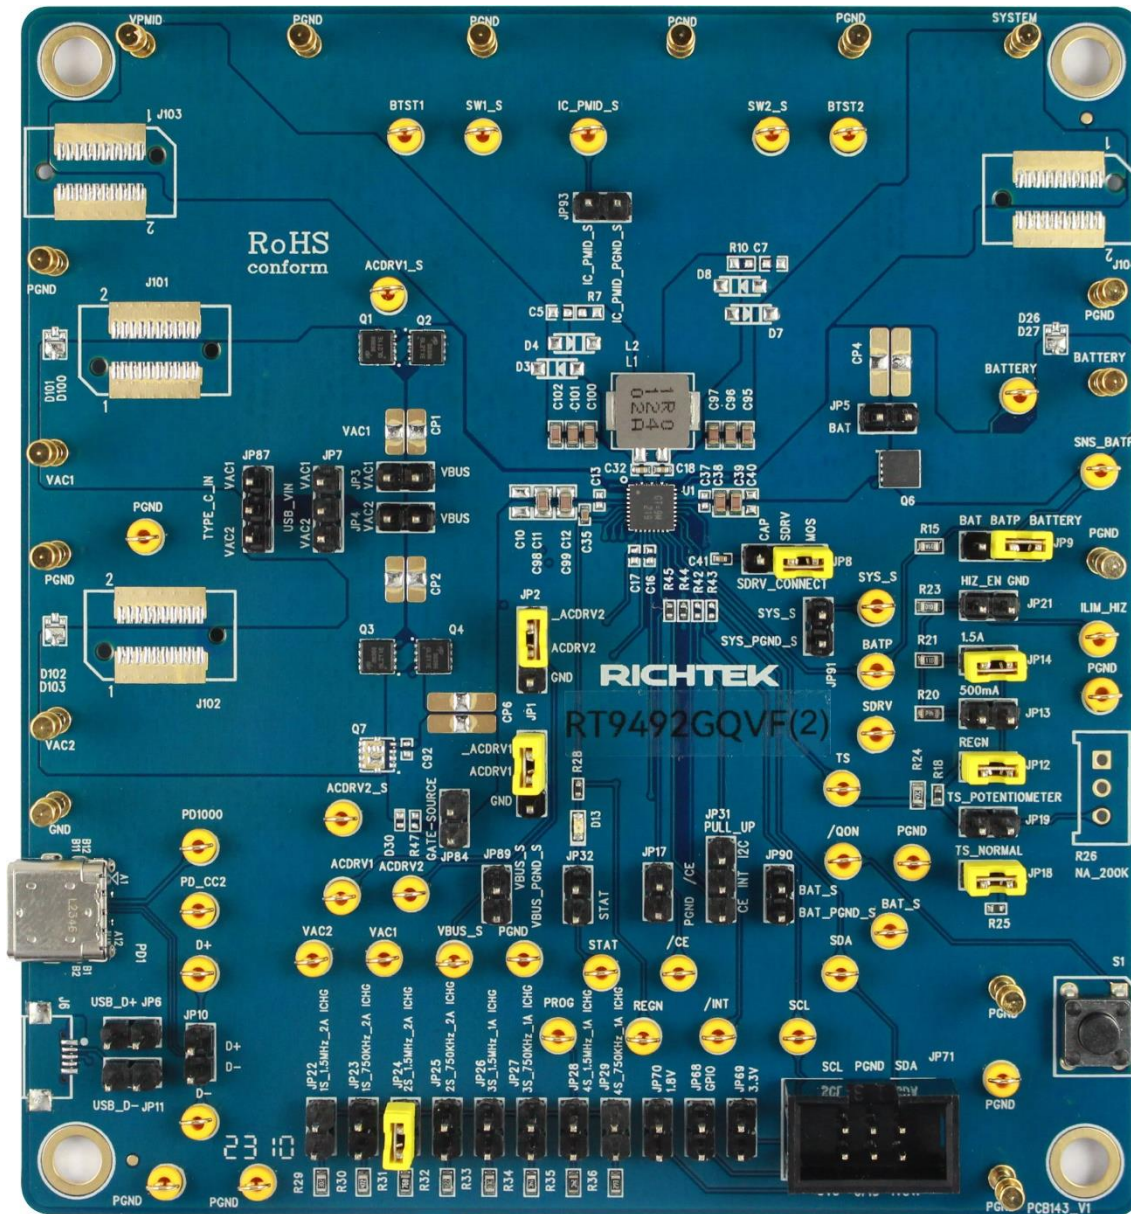

Carefully inspect all the components used in the EVB according to the following Bill of Materials table, and then make sure all the components are undamaged and correctly installed. If there is any missing or damaged component, which may occur during transportation, please contact our distributors or e-mail us at [evb\\_service@richtek.com](mailto:evb_service@richtek.com).

## Test Points

The EVB is provided with the test points and pin names listed in the table below.

Test Point/ Pin Name	Function
VAC1	Input voltage for VAC1.
PGND	Ground.
VAC2	Input voltage for VAC2.
SYSTEM	Output voltage for sys.
BATTERY	Battery connection point.
SNS_BATP	External battery positive sense
PD1	USB TYPE-C port.
JP87	TYPE-C USB BUS tied to VAC1 or VAC2 jumper.
JP8	SDRV tied to SHIPFET or 1nF capacitor.
JP31	Pull up for I2C/INT/CE.
JP1	ACDRV1 tied to AC-RBFET1 or GND.
JP2	ACDRV2 tied to AC-RBFET2 or GND.
JP3	VAC1-VBUS short jumper.
JP4	VAC2-VBUS short jumper.
JP5	BAT-BATTERY short jumper.
JP9	BATP tied to BATTERY or BAT.
JP12	REGN for TS circuit pull high jumper.
JP13	Test resistance jumper with 500mA for ILIM_HZ function.
JP14	Test resistance jumper with 1.5A for ILIM_HZ function.
JP17	CE pull low jumper.
JP18	Test resistance jumper with TS_NORMAL for JEITA.
JP19	Test resistance jumper with TS_POTENTIOMETER for JEITA.
JP21	Test resistance jumper for ILIM_HZ function.
JP22	PROG resistance jumper for default set 1S_1.5MHz_2A ICHG.
JP23	PROG resistance jumper for default set 1S_750KHz_2A ICHG.
JP24	PROG resistance jumper for default set 2S_1.5MHz_2A ICHG.
JP25	PROG resistance jumper for default set 2S_750KHz_2A ICHG.
JP26	PROG resistance jumper for default set 3S_1.5MHz_1A ICHG.
JP27	PROG resistance jumper for default set 3S_750KHz_1A ICHG.
JP28	PROG resistance jumper for default set 4S_1.5MHz_1A ICHG.
JP29	PROG resistance jumper for default set 4S_750KHz_1A ICHG.
JP32	STAT_LED enable jumper.
CP1	VAC1-VBUS short pad.
CP2	VAC2-VBUS short pad.
CP4	BAT-BATTERY short pad.
S1	Button for exit ship mode or system reset.

**Default Jumper Setting on EVB**

Jumper	Description
JP1	Short ACDRV1 to _acdrv1.
JP2	Short ACDRV2 to _acdrv2.
JP8	Short SDRV to MOS.
JP9	Short B ATP to BATTERY.
JP12	Short REGN to TS pull-up resistor.
JP18	Short TS to normal temperature resistor.
JP14	Short ILIM for 1.5A.
JP24	For 2 cell/1.5MHz setting.



**Bill of Materials**


fsw = 1.5MHz						
Reference	Count	Part Number	Value	Description	Package	Manufacturer
U1	1	RT9492GQVF(2)	--	Switching charger	VQFN-29TL 4x4 (FC)	RICHTEK
C6, C8	2	GRM033R61C473KE84	47nF	Capacitor, Ceramic, 16V, X5R	C-0201	MURATA
C14, C15, C18, C32	4	0402B104K500CT	0.1 $\mu$ F	Capacitor, Ceramic, 50V, X7R	C-0402	WALSIN
C35	1	GRM155R60J475ME47D	4.7 $\mu$ F	Capacitor, Ceramic, 6.3V, X5R	C-0402	MURATA
C38, C39, C95, C96, C97	5	GRM188R61E106KA73	10 $\mu$ F	Capacitor, Ceramic, 25V, X5R	C-0603	MURATA
C41	1	0402B102K500CT	1nF	Capacitor, Ceramic, 50V, X7R	C-0402	WALSIN
C98, C99, C100, C101, C102	5	GRM188R6YA106MA73	10 $\mu$ F	Capacitor, Ceramic, 35V, X5R	C-0603	MURATA
D13	1	LNL-190SUG	--	LED_GREEN	LED-0603	LighTop
L2	1	PIMB063T-1R0MS-68	1 $\mu$ H	20%/6.7m $\Omega$	L-7-4X6-8	CYNTEC
PD1	1	C-NBR2L-AK5322	--	USB TYPE-C 3.1	9.24x9.1mm	ADVANCED-CONNECTEK
Q1, Q2, Q3, Q4	4	AONR36366	--	MOS	DFN 3X3 EP	ALPHA & OMEGA SEMICONDUCTOR
Q6	1	AON7528	--	MOS	DFN 3.3X3.3 EP	ALPHA & OMEGA SEMICONDUCTOR
R15	1	WR06X1000FTL	100 $\Omega$	Resistor, Chip, 1/10W, 1%	R-0603	WALSIN
R18	1	CR-02FL6---5K1	5.1k $\Omega$	Resistor, Chip, 1/16W, 1%	R-0402	VIKING
R20	1	RTT032553FTP	255k $\Omega$	Resistor, Chip, 1/10W, 1%	R-0603	RALEC
R21	1	WR06X1273FTL	127k $\Omega$	Resistor, Chip, 1/10W, 1%	R-0603	WALSIN
R23	1	WR06X1003FTL	100k $\Omega$	Resistor, Chip, 1/10W, 1%	R-0603	WALSIN
R24	1	WR06X3012FTL	30.1k $\Omega$	Resistor, Chip, 1/10W, 1%	R-0603	WALSIN
R25, R44, R45	3	WR04X1002FTL	10k $\Omega$	Resistor, Chip, 1/10W, 1%	R-0402	WALSIN
R28	1	WR04X4701FTL	4.7k $\Omega$	Resistor, Chip, 1/16W, 1%	R-0402	WALSIN

fsw = 1.5MHz						
Reference	Count	Part Number	Value	Description	Package	Manufacturer
R29	1	WR06X3001FTL	3kΩ	Resistor, Chip, 1/10W, 1%	R-0603	WALSIN
R30	1	WR06X4701FTL	4.7kΩ	Resistor, Chip, 1/10W, 1%	R-0603	WALSIN
R31	1	RC0603FR-076K04L	6.04kΩ	Resistor, Chip, 1/10W, 1%	R-0603	YAGEO
R32	1	WR06X8201FTL	8.2kΩ	Resistor, Chip, 1/10W, 1%	R-0603	WALSIN
R33	1	WR06X1052FTL	10.5kΩ	Resistor, Chip, 1/10W, 1%	R-0603	WALSIN
R34	1	WR06X1372FTL	13.7kΩ	Resistor, Chip, 1/10W, 1%	R-0603	WALSIN
R35	1	RTT031742FTP	17.4kΩ	Resistor, Chip, 1/10W, 1%	R-0603	RALEC
R36	1	CR0603F27K0P05Z	27kΩ	Resistor, Chip, 1/10W, 1%	R-0603	EVER OHMS
S1	1	HTS6601H	--	SW-TACT-SWITCH	TACT-BTN	High-Tronics




**Typical Applications**


**EVB Schematic Diagram**

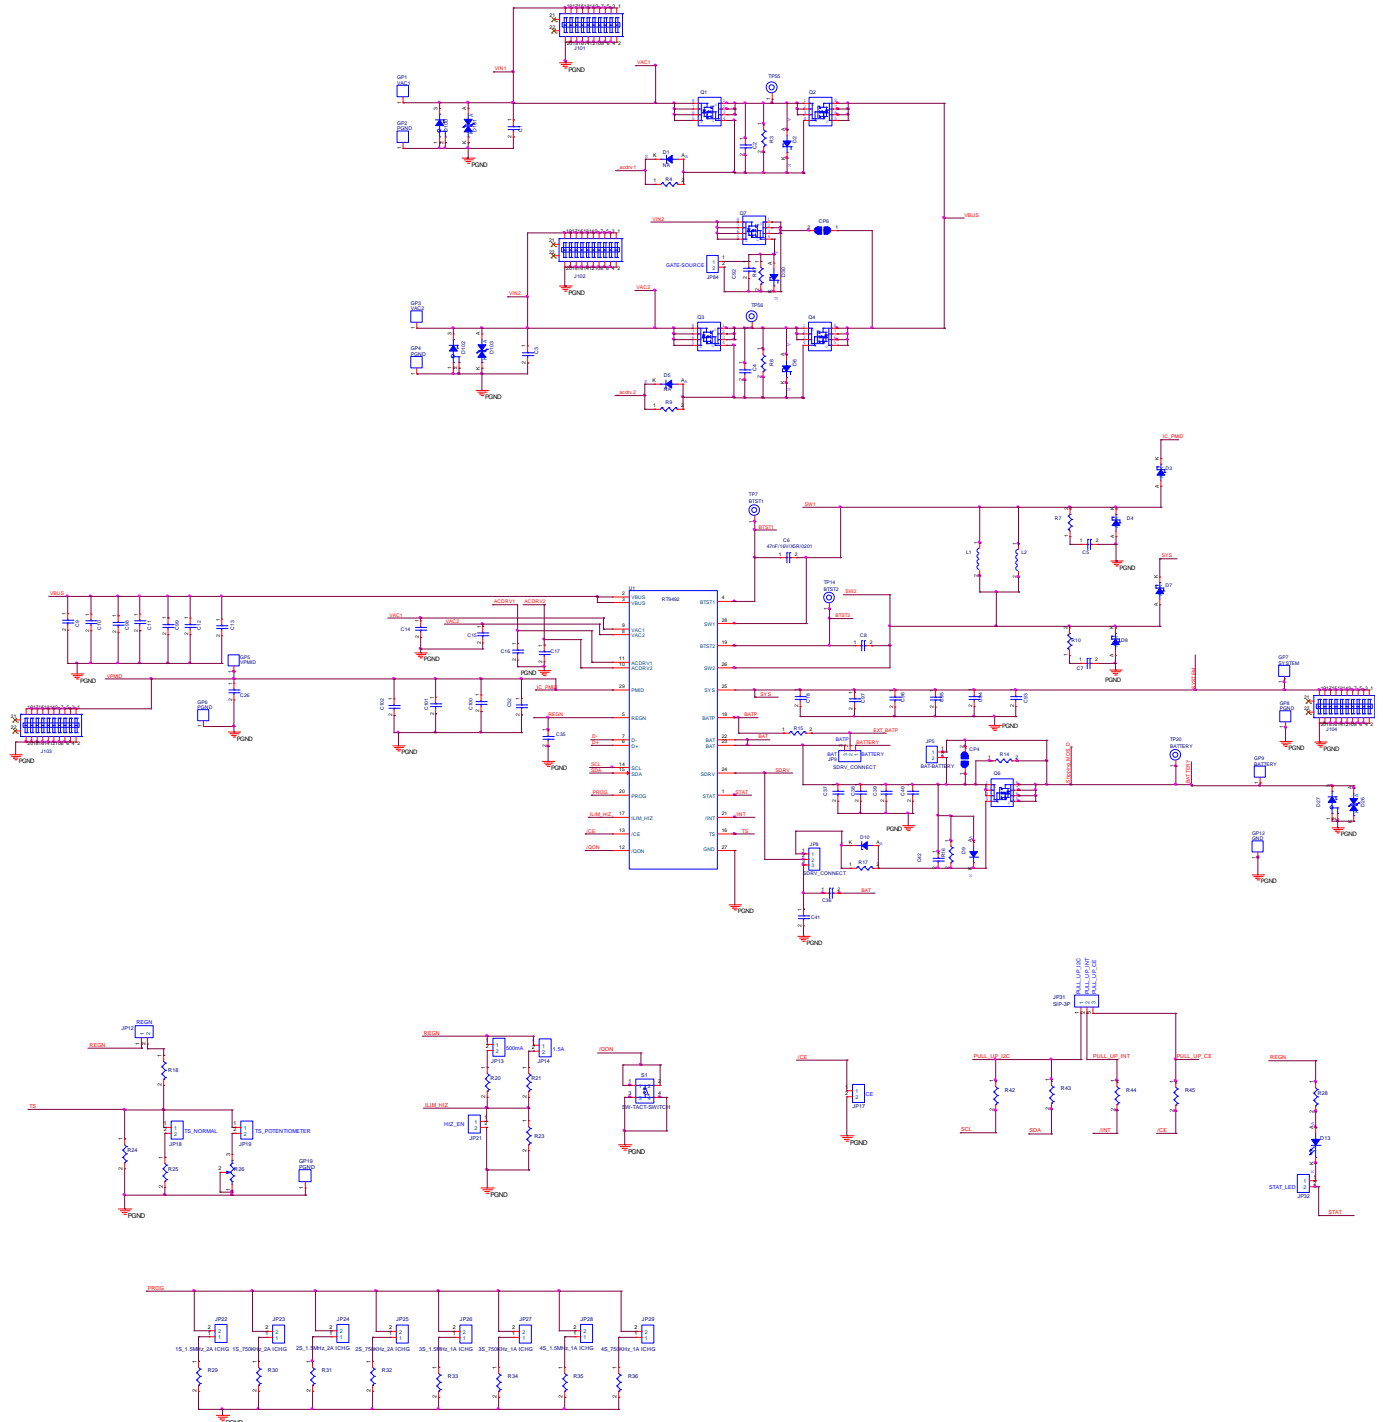

1. The capacitance values of the input and output capacitors will influence the input and output voltage ripple.
2. MLCC capacitors have degrading capacitance at DC bias voltage, and especially smaller size MLCC capacitors will have much lower capacitance.

**Measure Result**

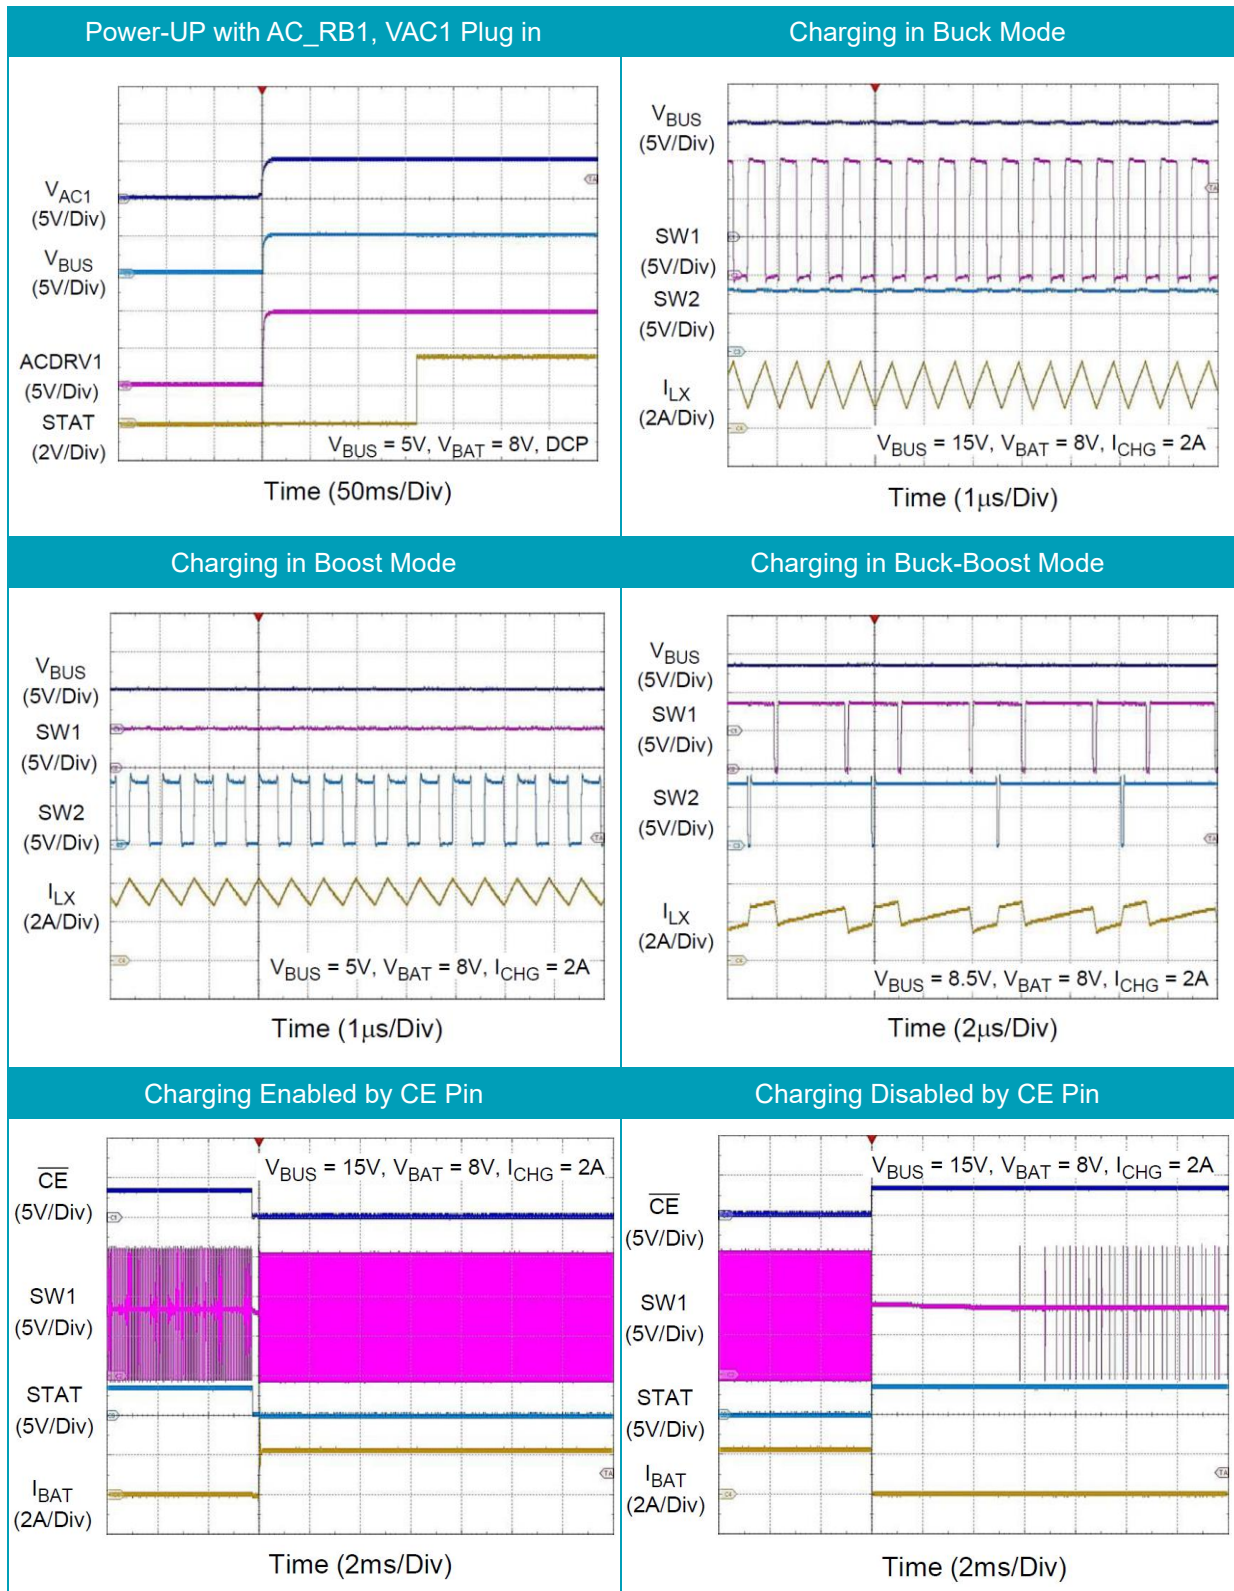

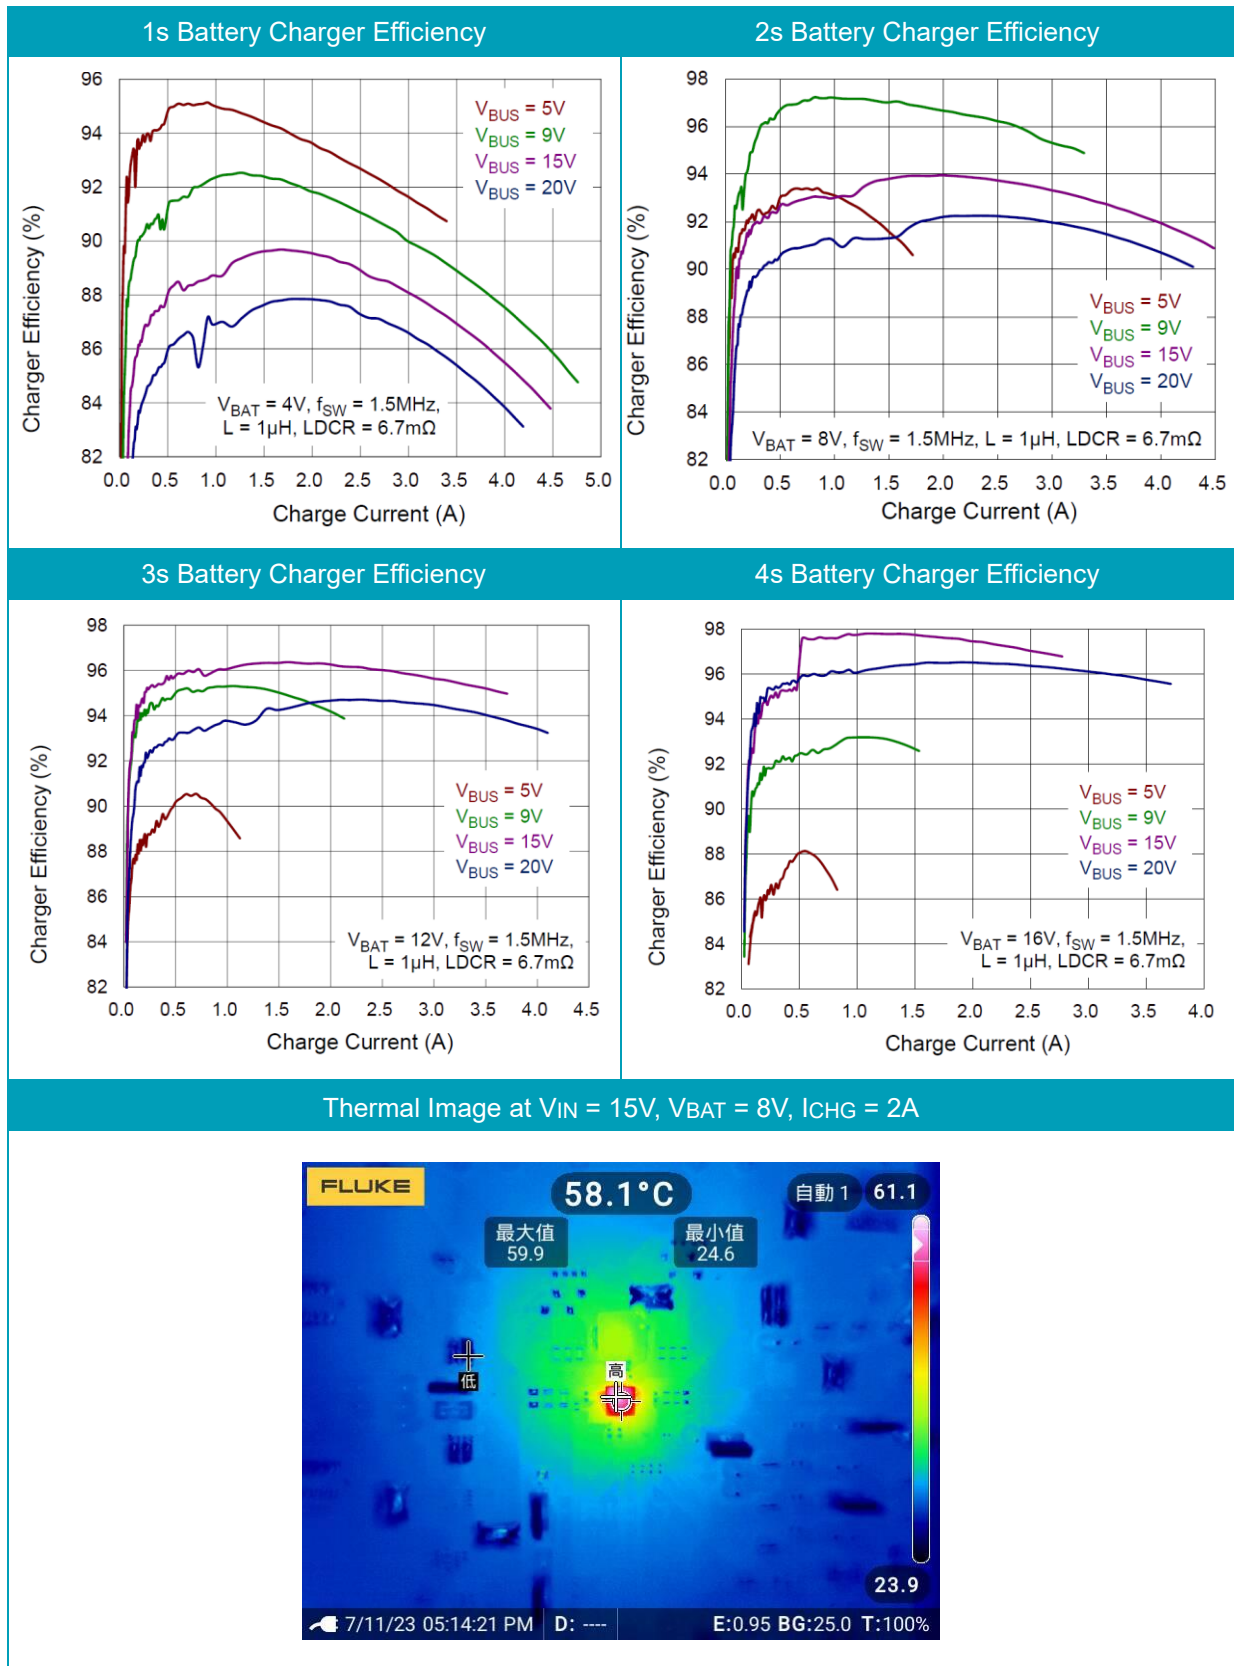

Note: When measuring the input or output voltage ripple, care must be taken to avoid a long ground lead on the oscilloscope probe. Measure the output voltage ripple by touching the probe tip directly across the output capacitor.



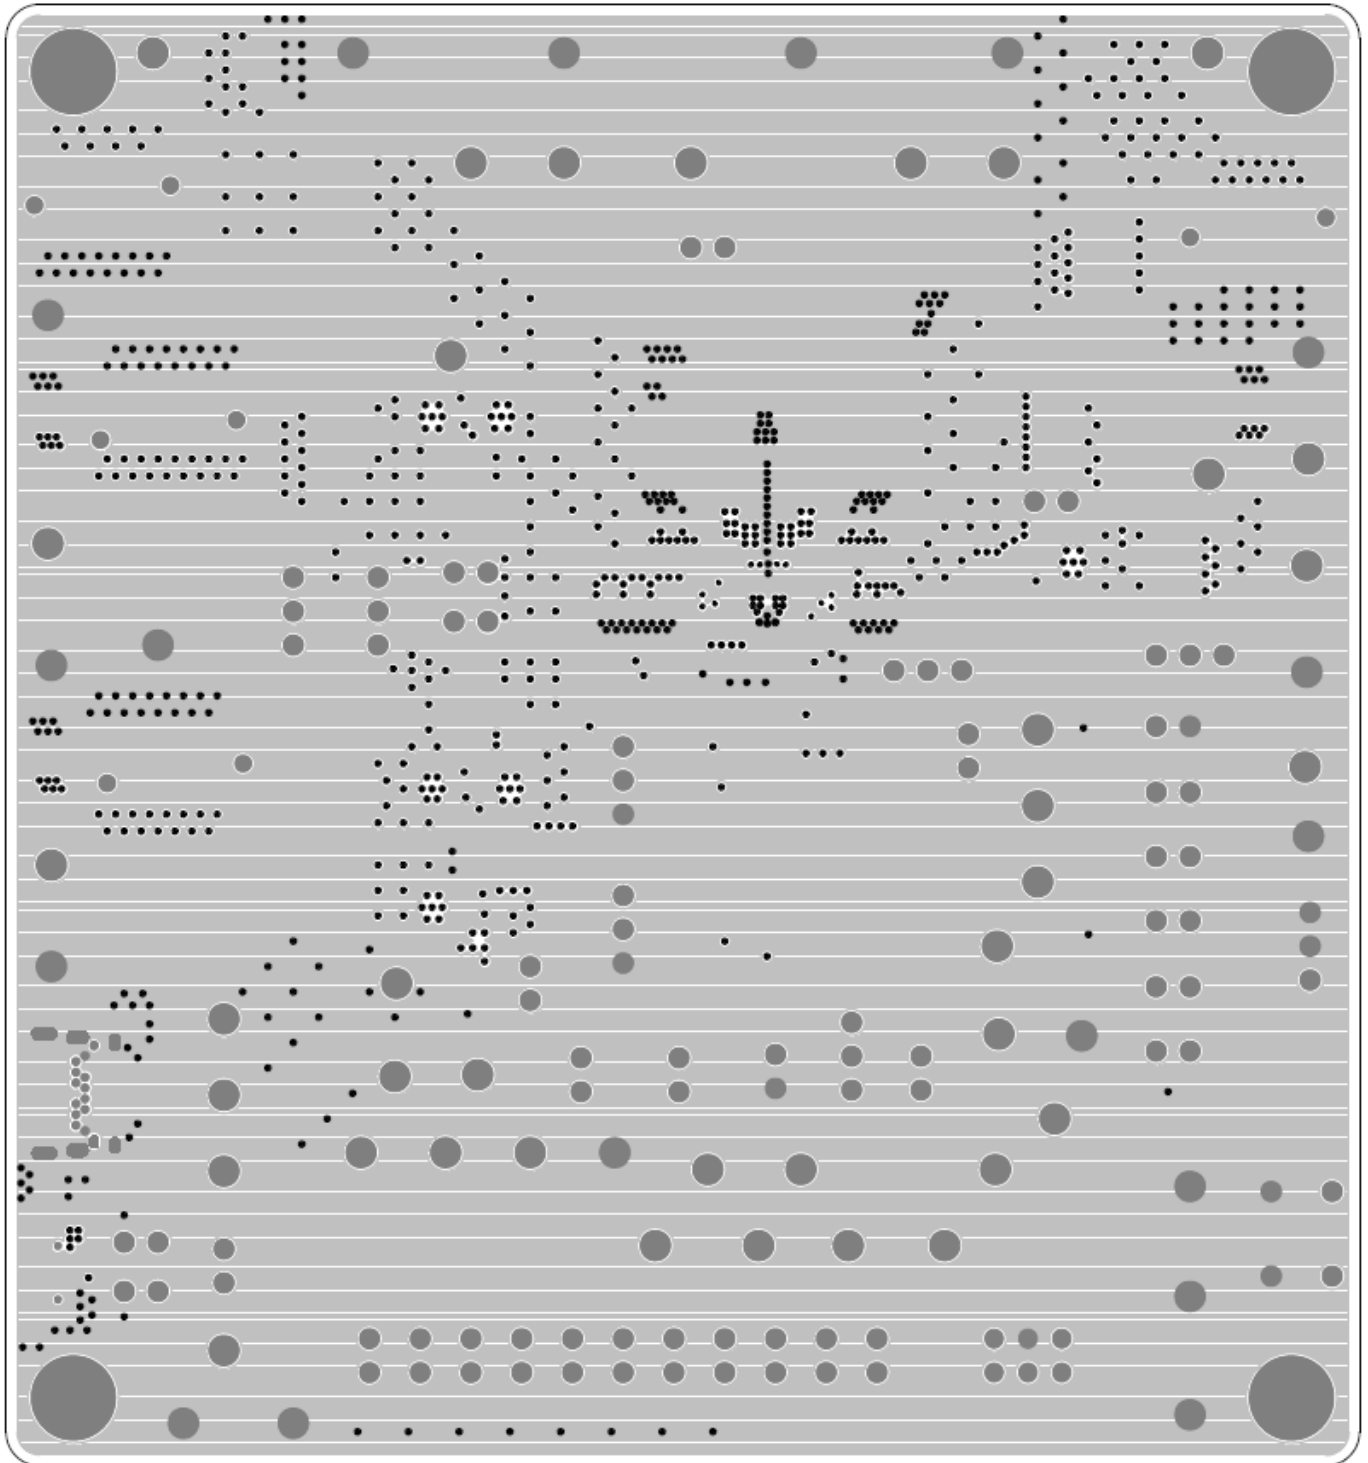


Figure 2. PCB Layout—Inner Side (2<sup>nd</sup> Layer)



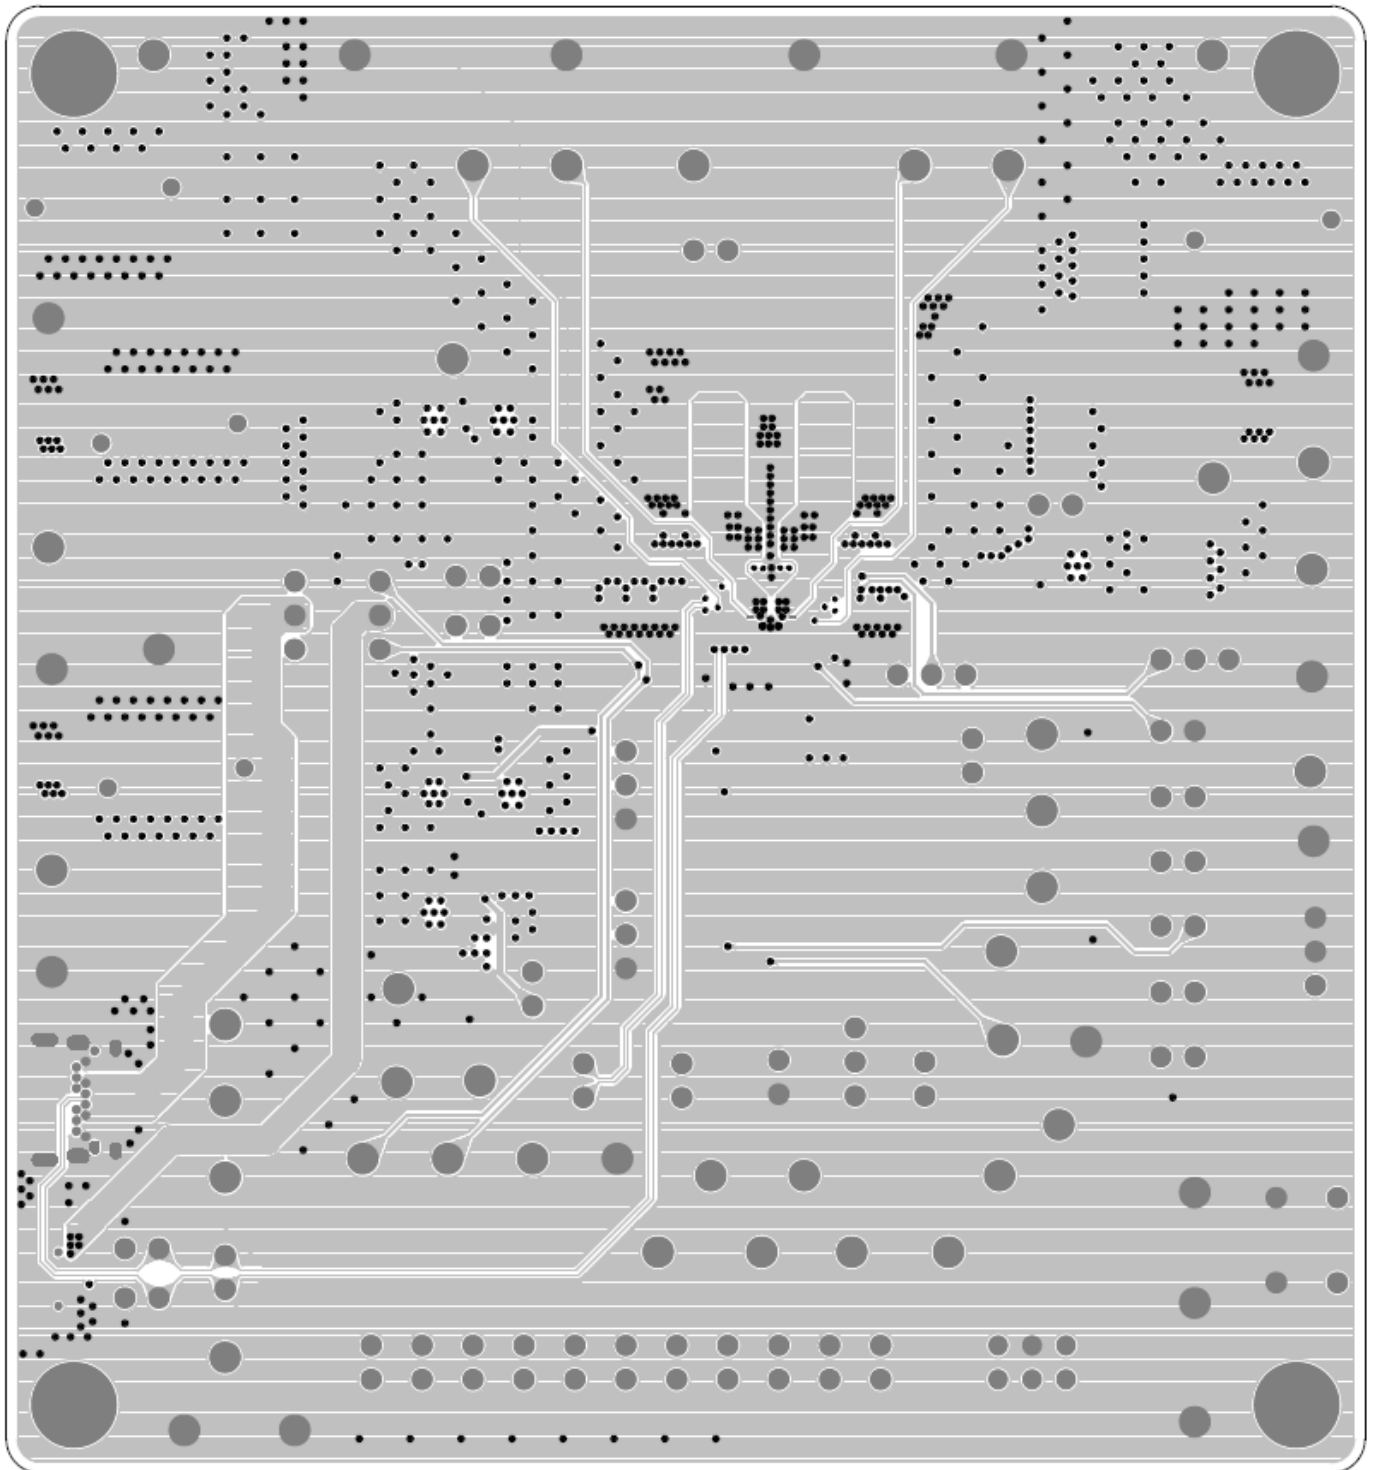


Figure 3. PCB Layout—Inner Side (3<sup>rd</sup> Layer)

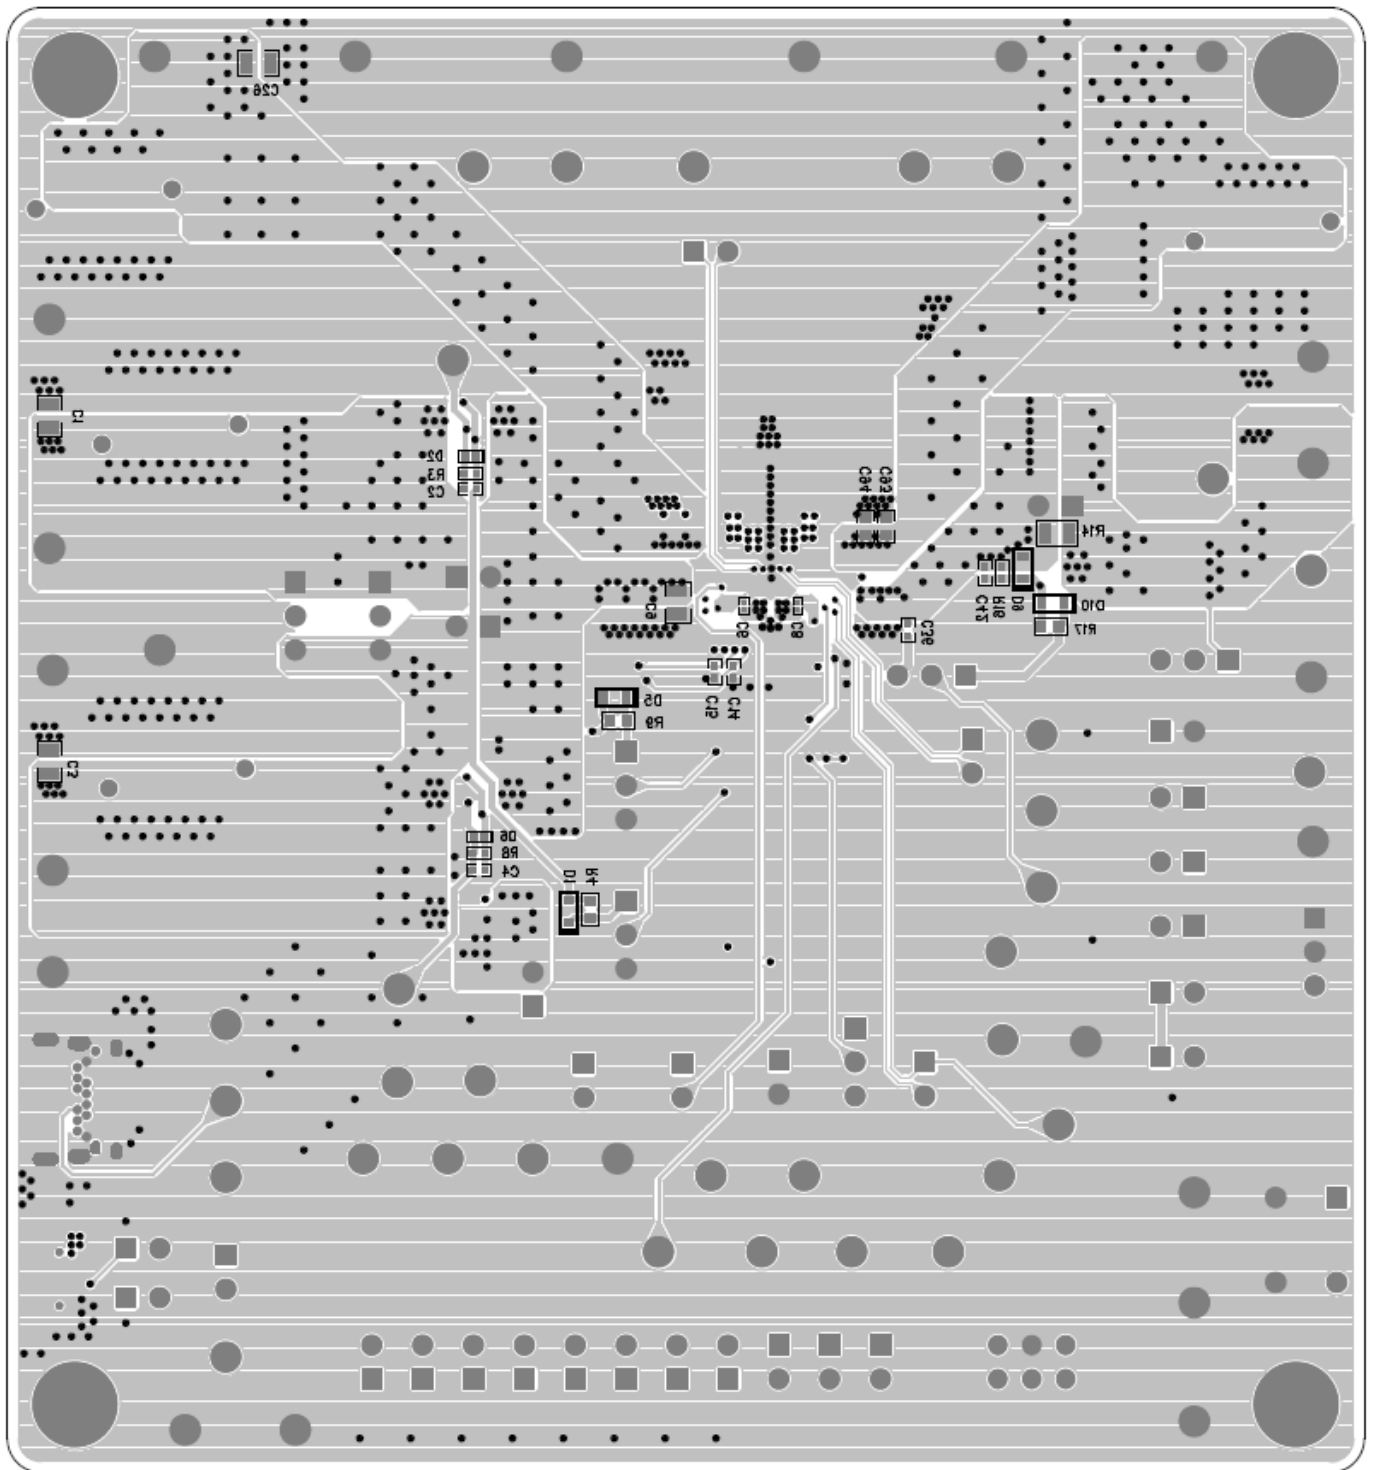


Figure 4. Bottom View (4<sup>th</sup> Layer)



### ***More Information***

For more information, please find the related datasheet or application notes from Richtek website  
<http://www.richtek.com>.

### ***Important Notice for Richtek Evaluation Board***

THIS DOCUMENT IS FOR REFERENCE ONLY, NOTHING CONTAINED IN THIS DOCUMENT SHALL BE CONSTRUED AS RICHTEK'S WARRANTY, EXPRESS OR IMPLIED, UNDER CONTRACT, TORT OR STATUTORY, WITH RESPECT TO THE PRESENTATION HEREIN. IN NO EVENT SHALL RICHTEK BE LIABLE TO BUYER OR USER FOR ANY AND ALL DAMAGES INCLUDING WITHOUT LIMITATION TO DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES.